



INSTALLATION MANUAL

SkyBox



With great power
comes great
responsibility.



FIND THE RIGHT SECTION

Contents

Transporting	5
Warnings	6
Safety	8
Quick start guide	9
What's included	10
Tools required	11
Dimensions and Clearance	13
Overview	14
Components	15
Getting ready to Transport	19
Positioning and Ventilation	20
Installing the SkyBox cabinet	21
Battery Interface BSL Battery	22
Battery Interface Pylontech Battery	23
Installing the batteries	24
Cable connections TOP view down	25
Cable connection troubleshooting	26
BSL Battery + DIP Switch settings	27
Adding solar panels	29
Hardwiring the SkyBox	33
Adding a generator	34
Commissioning	35
Startup procedure	36
Shutdown procedure	38
Monitoring	40
SIM card	41
FAQ's	42
Datasheet	43
Contact	45
Safety Data Sheet	46
Other manuals	57

TIME TO UP AND GO

Transporting



**Weight 200kgs -
250kgs approx.**

Your SkyBox comes preprogrammed and prewired, ready to go. It ships out securely strapped on a pallet in the off position to the destination discussed.

Weight ranges from 200kgs to 250kgs approximately—depending on parts used, batteries and other components available or other arrangements discussed with the SkyBox engineers in the pre-build stage.*




SkyBox should always be turned off properly before being moved and transported. Failing to power down may damage the SkyBox and components and cause property damage/fire.

SkyBox is extremely heavy; we do not recommend moving or attempting to lift the SkyBox without suitable lifting machinery to prevent personal injury and damage to the SkyBox. Incorrectly transporting and moving the SkyBox may void the warranty.

A qualified electrician may remove batteries as a last resort and must be cautiously handled. Removal of any components/parts without contacting Sky Energy first may cause severe injury and damage to the system and void the warranty.

We recommend using a forklift if applicable. However, these are also suitable:

- Forklift - Recommended.
- Hand trolley.
- Pallet jack.
- Other specialised lifting tools.

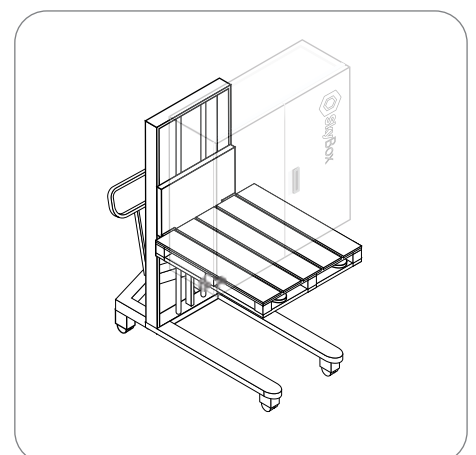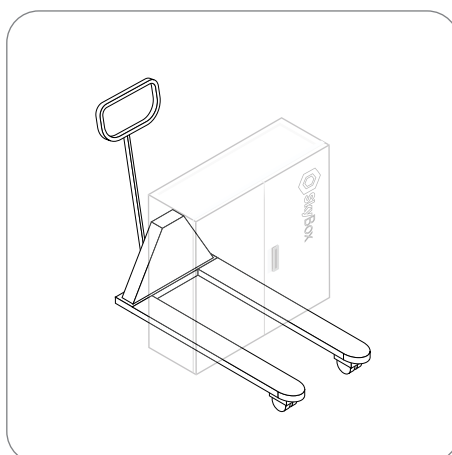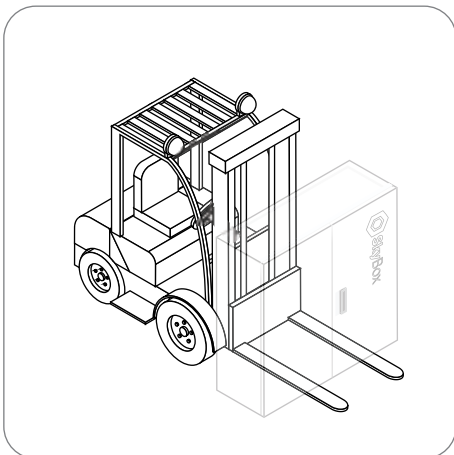

*Weight, parts and components may vary depending on stock availability and global supply.

IMPORTANT

Caution/Danger



The SkyBox is heavy. Use a minimum of two people or suitable lifting equipment to manoeuvre the battery units into position. A licensed electrician must install the SkyBox.

IMPORTANT

Warnings

- After transporting SkyBox, Check all terminals are tight and have a good connection before use.
- Ensure SkyBox is earthed and installed according to your region's electrical standards.
- When choosing a location for your SkyBox, ensure it is at least 1.5M away from any gas connection or ignition source.
- You must install the SkyBox to your region's electrical standards and battery code.
- Keep the SkyBox away from flooding/water

WARNING

Lithium Battery hazard

Fire

In the case of fire, immediately evacuate the area and call emergency services (000 in Australia). Keep a dry agent fire extinguisher readily available, and DO NOT use water to extinguish a battery fire. Beware: battery fires may produce toxic gas.

Important Note

Sky Energy provide an SDS document with each SkyBox system. You can also find an electronic SDS document online at www.skyenergy.com.au.

Damaged battery

Do not use a damaged battery. Please dispose of lithium batteries at an appropriate recycling centre. Please contact Sky Energy should you require more information or guidance.

For further safety information, please refer to the SDS (Safety Data Sheet) document.

IMPORTANT

Safety

! **WARNING:** Any works inside the SkyBox are strictly undertaken by a qualified electrician only. Installation of the SkyBox is recommended to be carried out by a licensed electrician.

! All wiring diagrams and written instructions are provided as a guide only. Making sure installation is compliant and adheres to appropriate standards is the sole responsibility of the installer.

Please refer to the following relevant standard when installing any SkyBox product:


AS/NZS 3000:2018	Wiring rules
AS/NZS 5033:2014 (amdt 1&2)	Installation and safety requirements for solar, photovoltaic (PV) arrays
AS/NZS 4509.2:2012	Design of stand-alone power systems
AS/NZS 1170.2:2011	Structural design actions – Wind actions
AS/NZS1768:2007	Lightning protection
AS/NZS 3008.1.1:2017	Electrical installations – Selection of cables

! A qualified electrician who has thoroughly read and understood the operation manual and all hazards and dangers involved should go ahead with the installation of the SkyBox.

! **WARNING:** Do not attempt to charge the lithium batteries provided with this system with any charger device (other than the SkyBox). DO NOT connect any devices directly to the DC battery bus. Any attempts to do so will void the warranty.

This installation manual covers all the following model numbers:

- SkyBox
- Skytainer


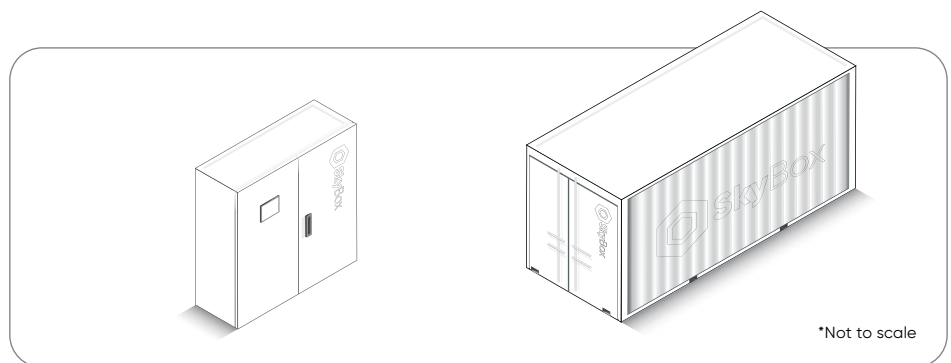


Sky Energy is always trying to better its products; as such, the installation manual and its content are subject to change at any time without notice. To ensure you have the most up-to-date manual, we advise you to visit www.skyenergy.com.au and download the relevant documentation.


GETTING UP AND RUNNING

Quick start guide

1. Choose the desired space for the SkyBox and clear the surrounding area.
2. Place the SkyBox on a stable, even surface. Remember to use proper lifting equipment to move into place.

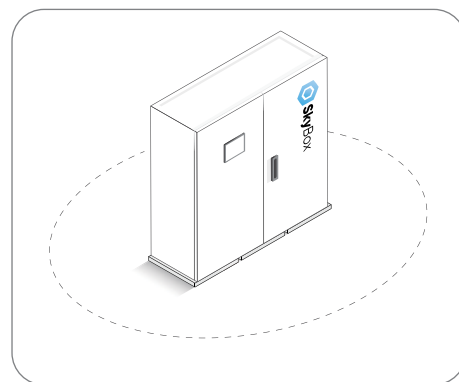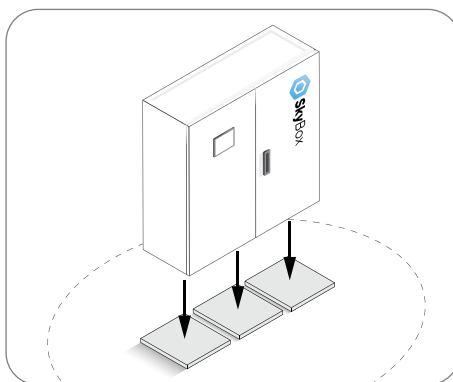

3. Place the batteries into the SkyBox cabinet, and secure them with the supplied rack mounting bolts.

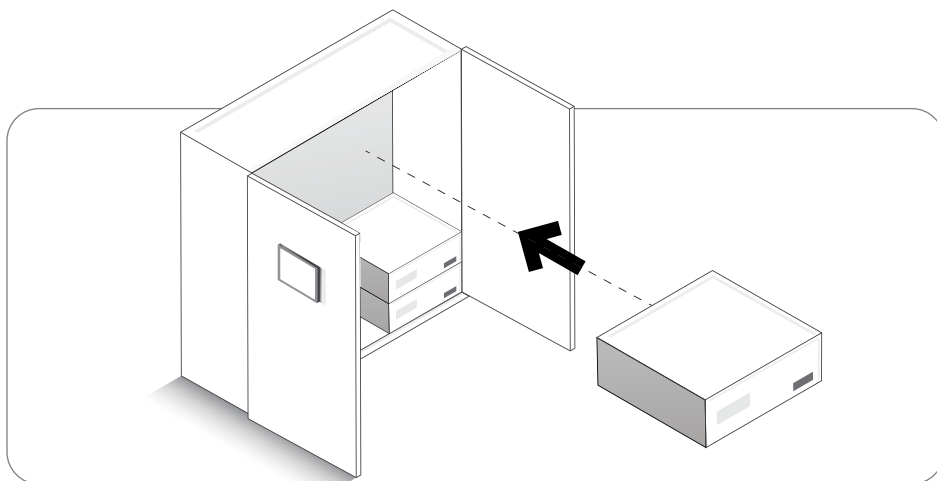

4. Plug in or screw down the black and red cables onto the battery terminals.
5. Plug inverter cable into CAN port on the battery.
6. The powerpoint is now live and ready for use.
7. Turn the system on by following the start up procedure.

BITS AND PIECES

What is included with SkyBox



WHAT YOU GET IN THE DELIVERY

- SkyBox
- Solar Panels (If Solar option is selected)
- Batteries (if the Battery option is selected)



WHAT YOU DON'T GET, BUT MIGHT NEED

- Electrical Cables – DC and AC
- Conduits and fittings
- Screws and fixings
- MC4 Connectors
- MC4 Branch Connectors
- Dektites
- Silicone and sealants
- Cat 5 or Figure 8 Cable (You will need this if you are connecting a generator autostart)
- Earth Stake




REQUIRED SKILLS

- Qualified Electrician
- Solar panel installation experience (If buying with solar panels)

INSTALLING THE RIGHT WAY

Tools required

To make installing the SkyBox as quick and straightforward as possible, please ensure you have the correct tools before starting.

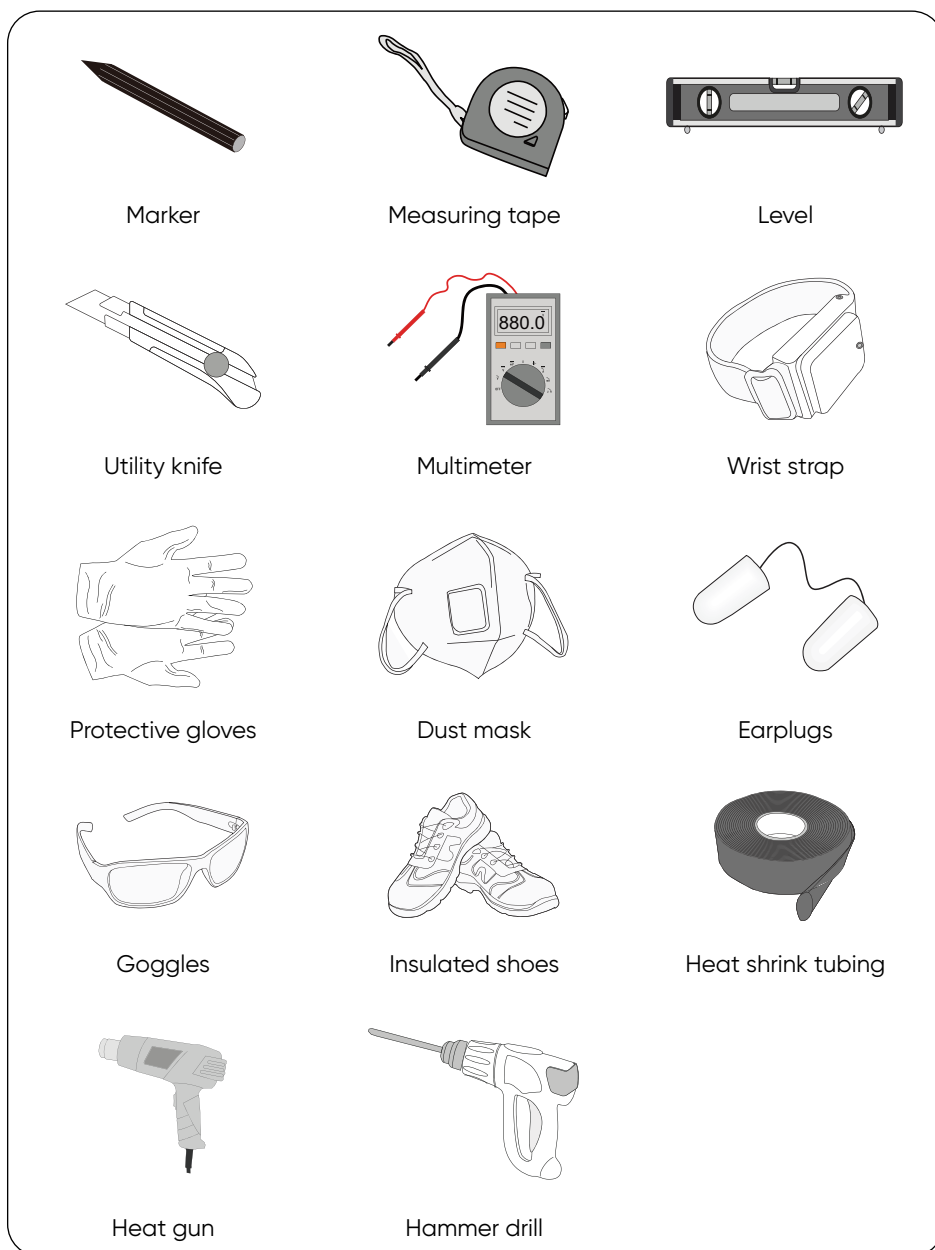

INSTALLING THE RIGHT WAY


Tools required




Rubber mallet



Electric screwdriver

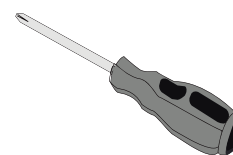


Phillips screwdriver

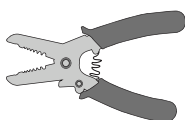


Wire stripper




Hydraulic plier

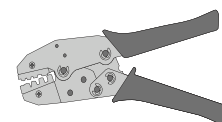


Crimping tool

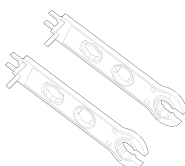


Wrench

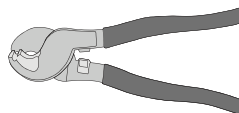

Wire clipper

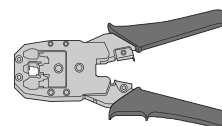


RJ45 Crimping tool

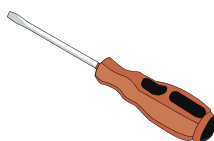

Flat head screwdriver




Torx screwdriver

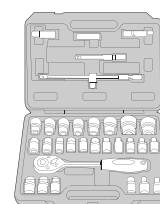


Socket wrench

ITS NOT THE SIZE THAT MATTERS

Dimensions & Clearance

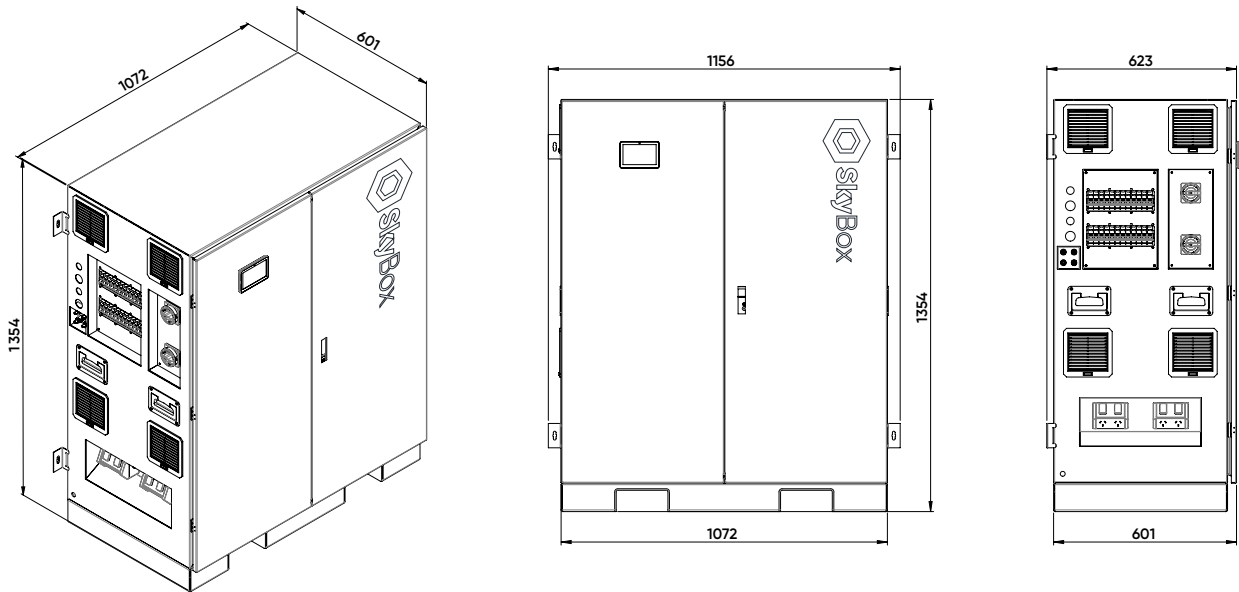

*Sizing may vary depending on stock availability and global supply. Orientation of inlets may vary.

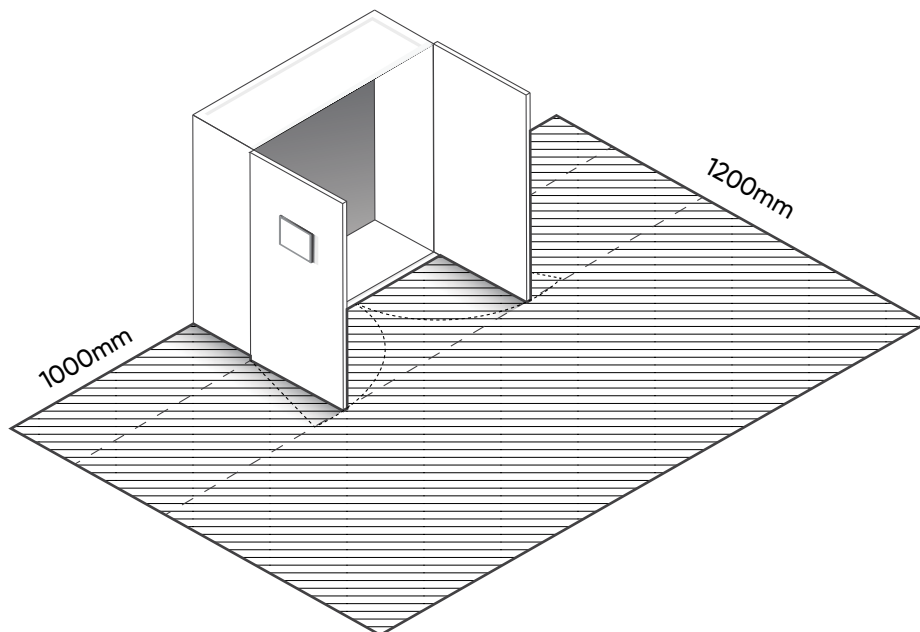

CREATE YOUR OWN POWER GRID

Overview

SkyBox gives everyone freedom and independence from the power grid.

Acting as a central 'brain,' the SkyBox manages incoming power from your solar, or generators.

Balancing these power sources and storing excess energy in the internal batteries, SkyBox creates a reliable off-grid electricity supply.


ACCESSING THE INTERNALS

Components

Opening the SkyBox


A key is required to access the internal section of the SkyBox. Now that the door has been unlocked lift the handle toward you, then keep raising it to the right until it pops out. Use the handle to pull open the door as required. The left door can now be opened with ease.

We strongly recommend keeping the SkyBox locked at all times.

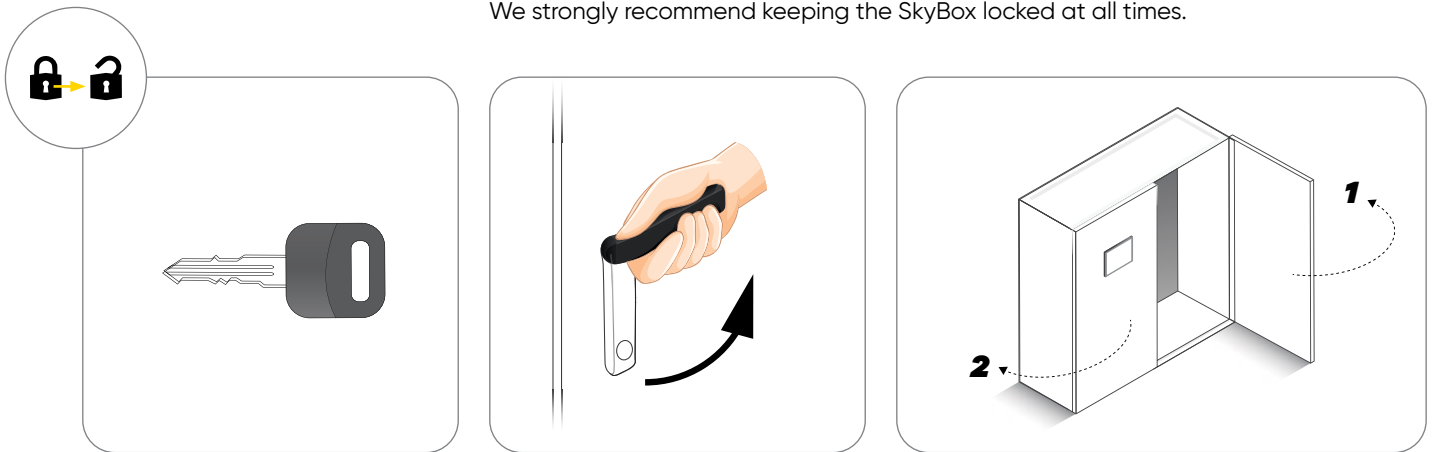

Closing the SkyBox

To close and lock the SkyBox, first, make sure the left door is shut. Close the right door and use the handle to push down clockwise until the handle pops into place. Use the key to lock the SkyBox.

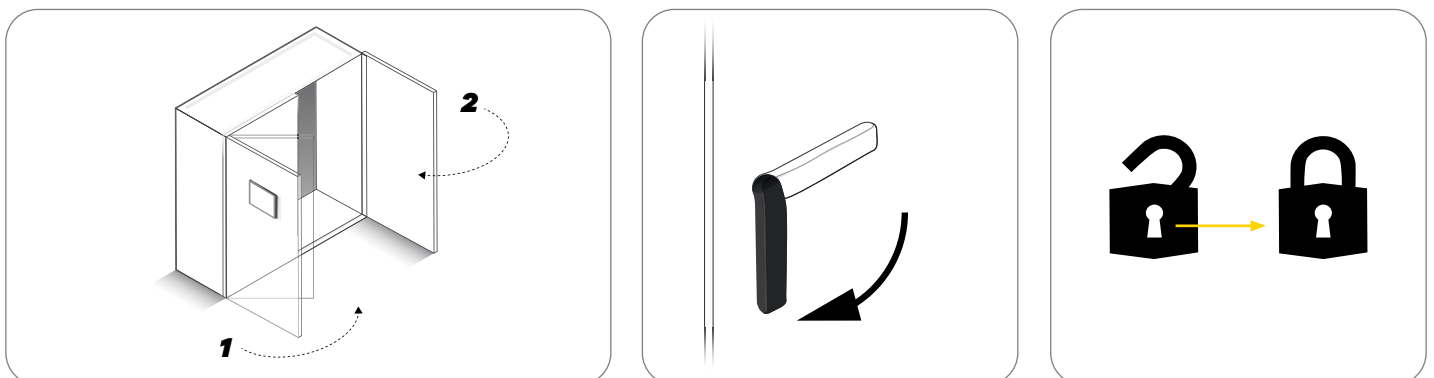

If you have lost your set of keys and cannot access your SkyBox, please contact our team at **1300 787 488**. We will send you a replacement pair for a small fee.

INTRODUCING THE SKYBOX

Components (outside)

Key

- 01 Key Handle
- 02 Key Hole
- 03 GX 50 Touchscreen (cover supplied)




INTRODUCING THE SKYBOX

Components (side)

Key

- 01 Switchboard
- 02 Solar plug or should we say MC 4 inputs
- 03 PV Array Isolators
- 04 AC Cable Penetrations
- 05 Extraction fans
- 06 Inlet fan and vent
- 07 Earthing cable penetration
- 08 GPO's

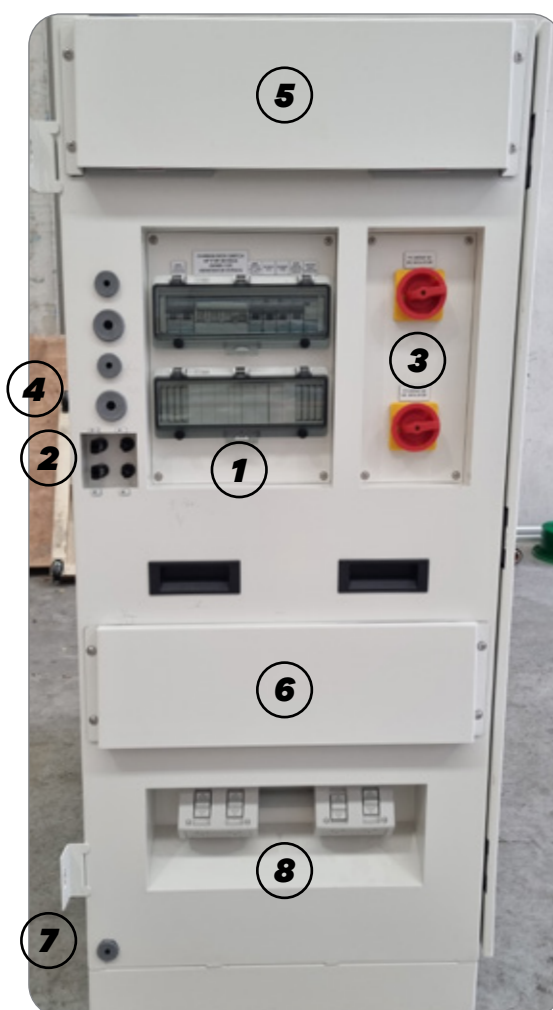


INTRODUCING THE SKYBOX

Components (inside)

Key

- 01 Inverter
- 02 Battery rack
- 03 Extraction fans
- 04 Inlet fan and vent
- 05 DC isolator
- 06 Charge Controller
- 07 Monitoring
- 08 Thermostat

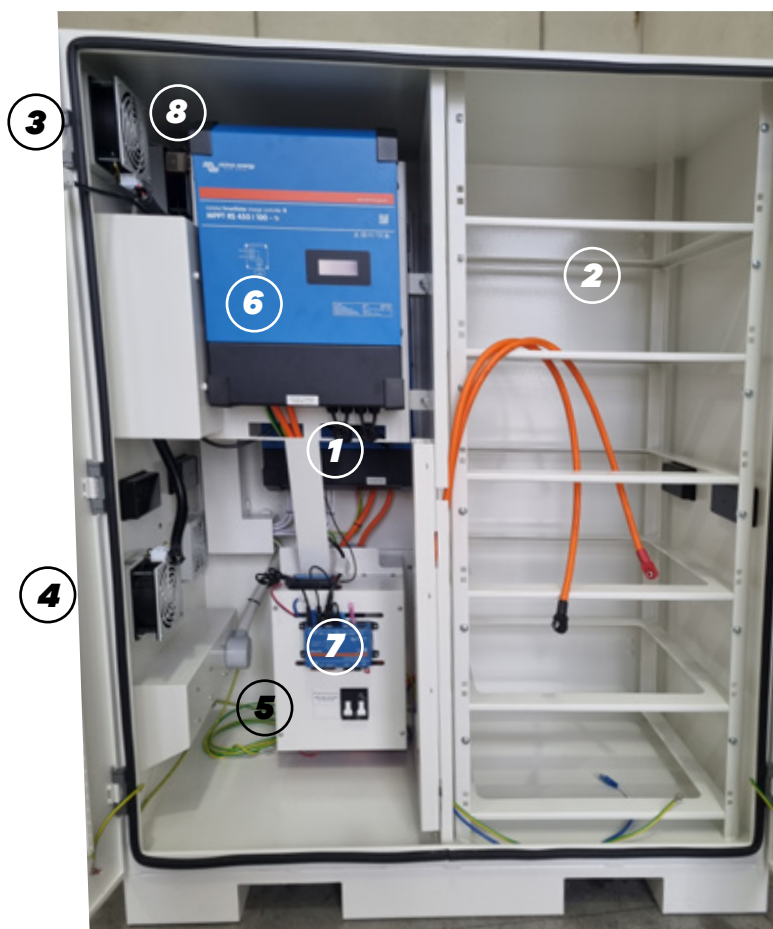

*General layout pictured. Layout may vary.

BEFORE YOU GO

Getting ready to transport





Warning

Never ship the skybox with batteries installed.

Warning

Remove batteries before transporting them, and always ship in secure packaging to protect them from damage.

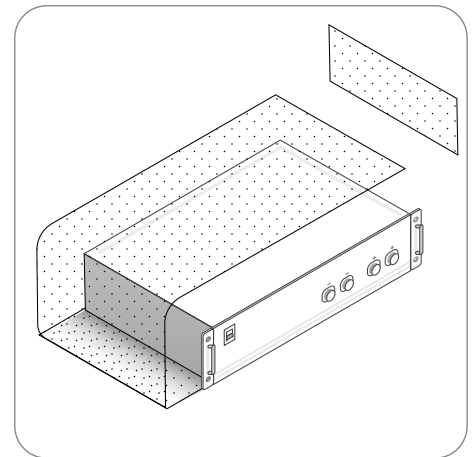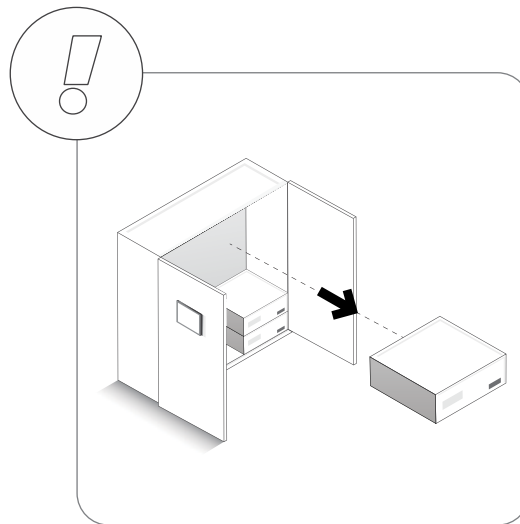

LOCATION, LOCATION, LOCATION

Positioning and Ventilation


Designed, tested, and IP54 certified to withstand all weather conditions, SkyBox is a freestanding system that can be installed indoors or outdoors.

Prebuilt fans and vents are situated on the left hand side. These vents should be unconcealed and have the specified clearance when the SkyBox is sitting in its installation position.

It is crucial to leave enough clearance on each side of the SkyBox to allow optimal/maximise airflow to and from the vents. Any blocking will leave the system open to overheating, which could cause irreversible malfunctions/damage. Following these instructions will keep the internal components of the SkyBox working optimally for longer.


The optimal and recommended placement for the SkyBox is in a shaded area away from direct sunlight. Do not place in a location that experiences long term direct sunlight.




If combined with solar panels, we recommend placing the SkyBox as close to the array to minimise voltage drop/power loss.

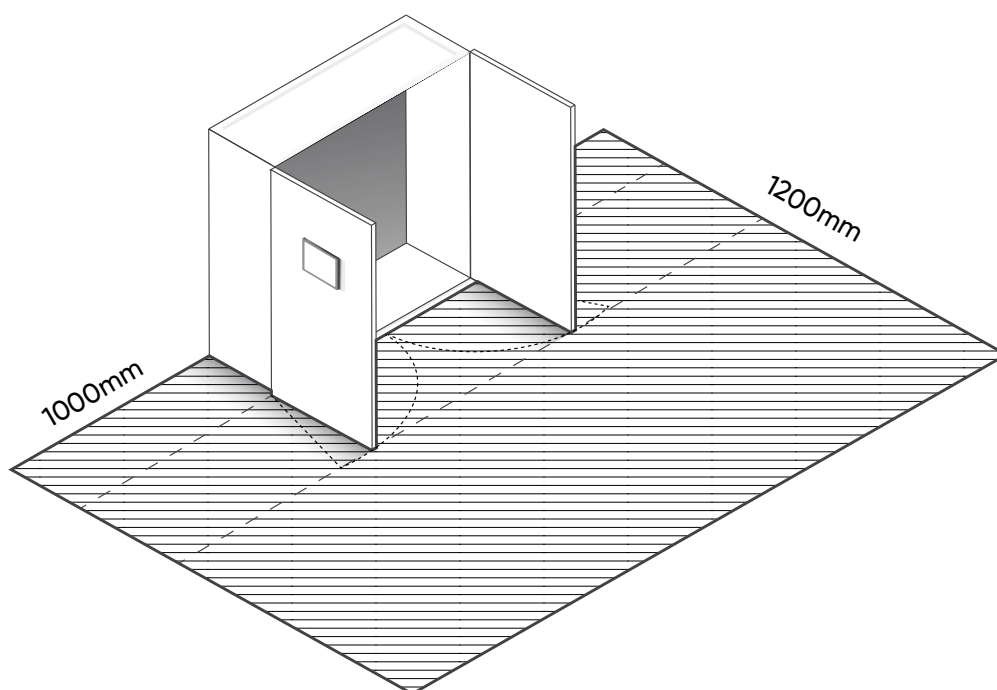

THE PERFECT PLACE

Installing the SkyBox cabinet


1. Choose the desired space for the SkyBox and clear the surrounding area.
2. Place the SkyBox on a stable, even surface. Remember to use proper lifting equipment to move into place.
3.  Secure and fasten the SkyBox to the wall with fastening eyelets. Screws not supplied.

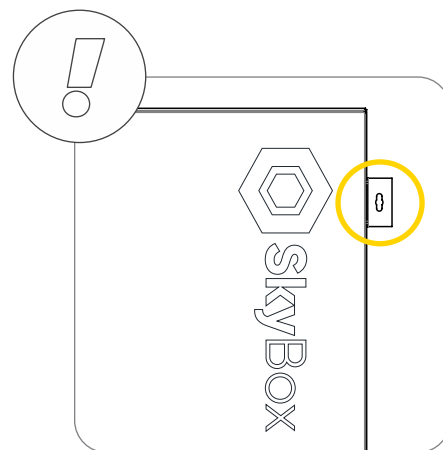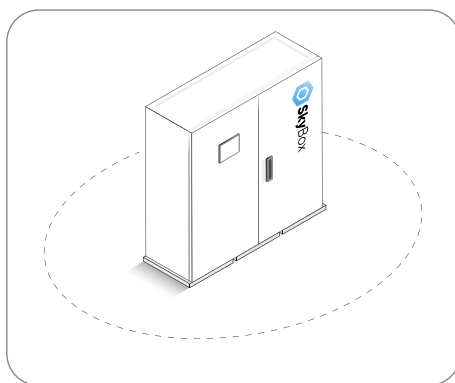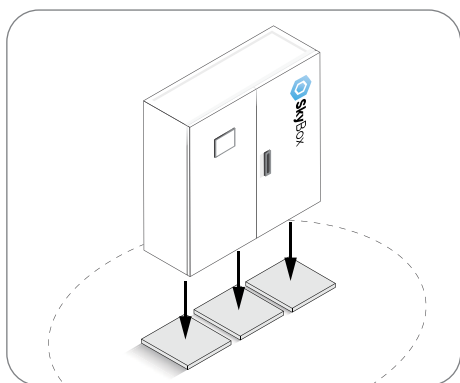

GETTING TO KNOW YOUR BATTERY

Battery interface

SL3ATT
GUIDE

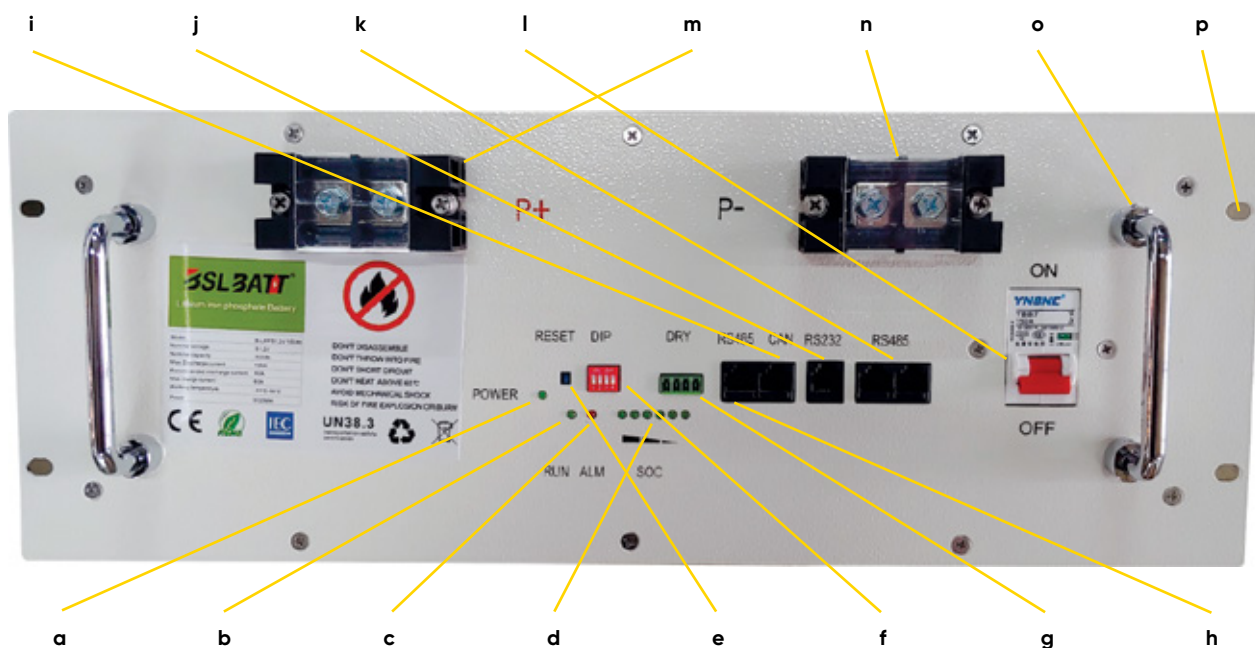


- a) Power indicator light
- b) Run light (battery activity)
- c) Alarm indicator light
- d) State of charge indicator lights
- e) Reset switch (BMS Power button)
- f) Dip switches for parallel connection
- g) Dry Contacts (mostly unused)
- h) RS485 Left port (Port 1)
- i) CAN Port (Port 2)
- j) RS232 Port (Unused)
- k) RS485 Right Ports (Ports 4 & 5)
- l) Circuit breaker (terminal power)
- m) Positive terminal
- n) Negative terminal
- o) Carry handles
- p) Mounting holes

GETTING TO KNOW YOUR BATTERY

Battery interface

PYLONTECH
GUIDE

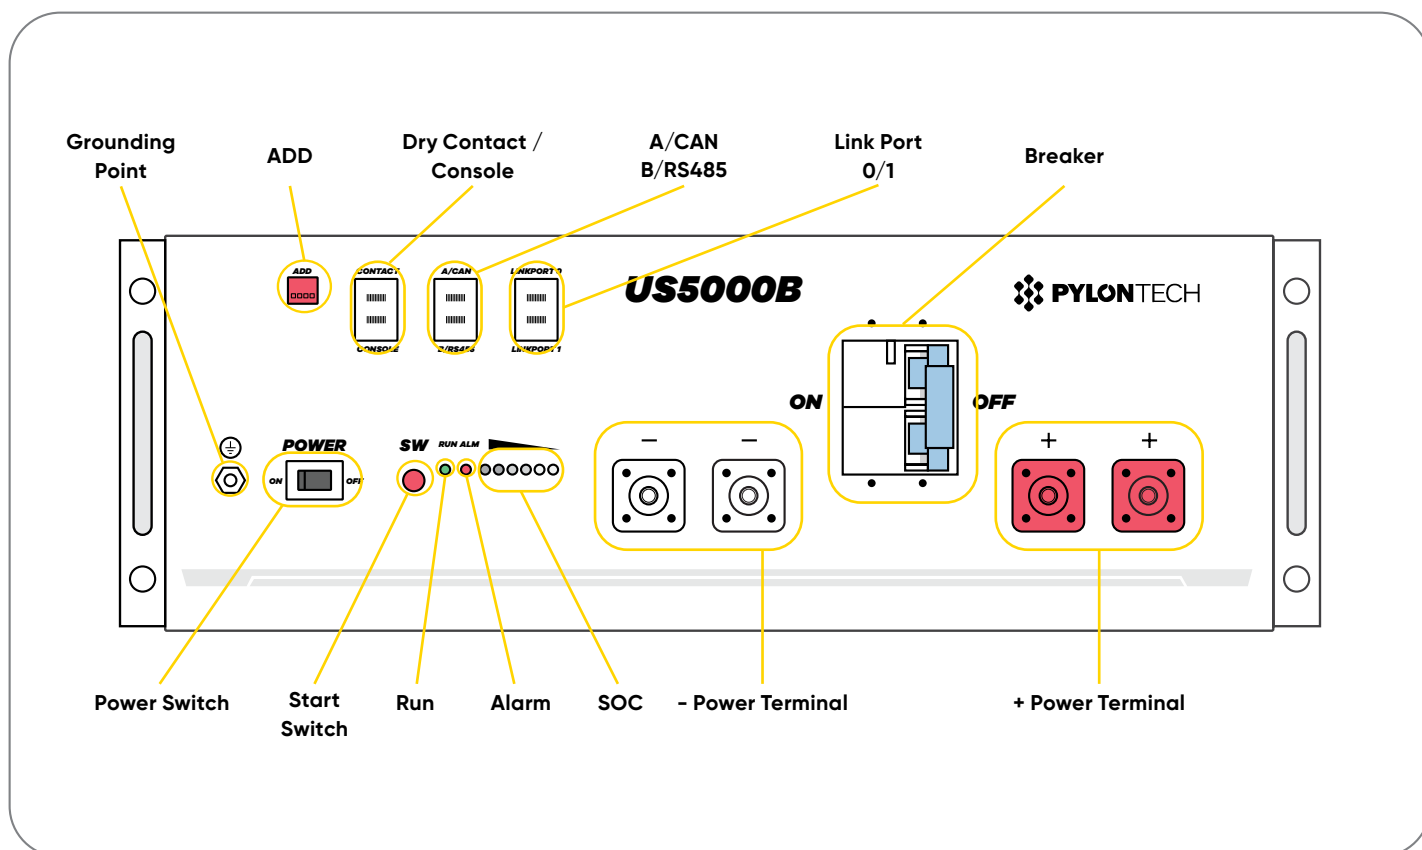

Breaker (for US5000-B)

Parameter: type C, rated voltage 60V/DC, rated current 125A, Icu: 10kA.

Standard reference: UL1077, IEC60947-2.

ON: power terminals connect with battery.

OFF: power terminals disconnect with battery.

Run

Green LED lighting to show the battery running status.

Alarm

Red LED flashing shows the battery has an alarm; lighting shows the battery is under protection.

SOC

Six green LEDs show the battery's current capacity.

Dip Switch (ADD)

Dip1: RS485 baud rate: 1: 9600; 0: 115200. After change, please restart battery.

Dip2: CAN terminal resistance on BMS side. 1: NONE. 0: connected. After change, no restart required. In single group mode, please keep dip2 at 0 position. For multi-groups, please refer to [5.10].

Dip3~4, reversed.

Based on design of BMS, the dip switch is deployed physically reversely.



Reminder

When breaker is released for protection, check the root cause of current surge and cable connection between battery and inverter first. Then try to connect again.

Power Switch

ON: ready to turn on.

OFF: power off. For storage or shipping.

Start Switch

Turn on: press more than 0.5s to start the battery.


Turn off: press more than 0.5 to turn off the battery.

GET THE BATTERIES CONNECTED

Installing the batteries in the cabinet


PYLONTECH
GUIDE

1. Place the batteries into the SkyBox cabinet, and secure with screws provided in battery rack.

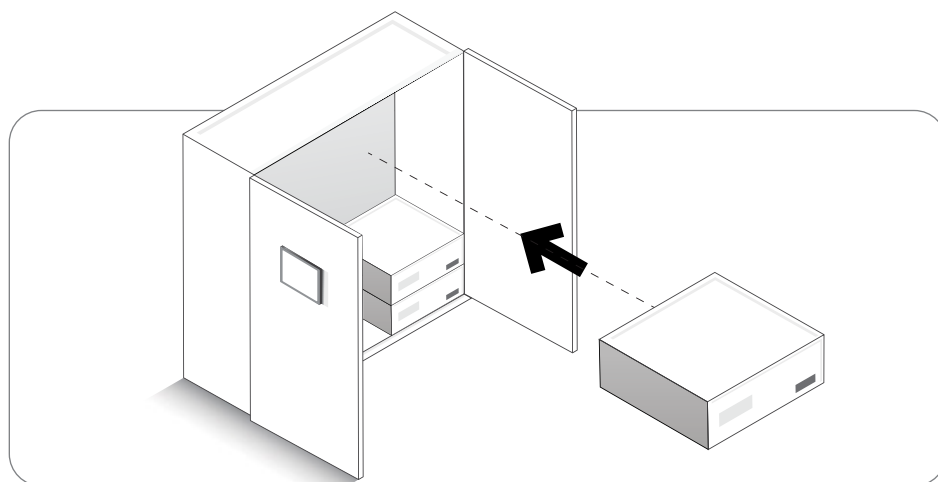

The hole on the bottom left hand side of cabinet is provided to run earth cable to earth rod if required.

2. Plugin the black and red cables onto the battery terminals. Ensure connections are tight.

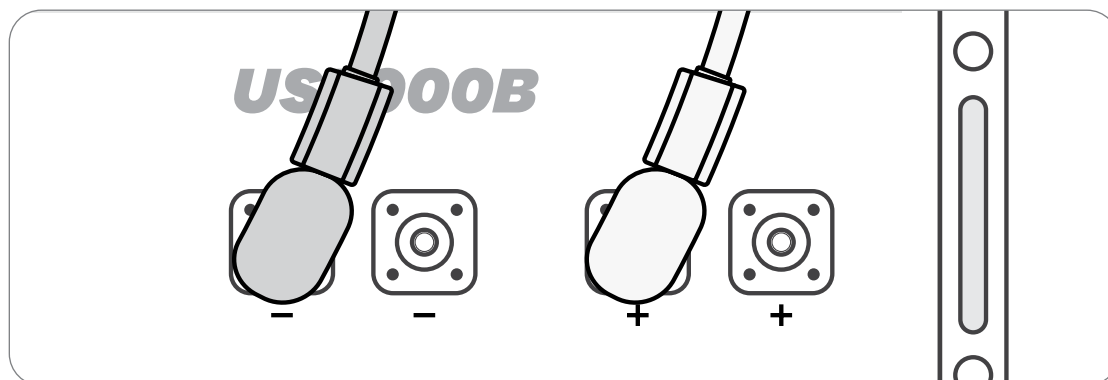


3. Plug inverter cable into A/CAN (Page 24).

GETTING THE BATTERIES TO WORK TOGETHER

Cable connections TOP view down

PYLONTECH
GUIDE

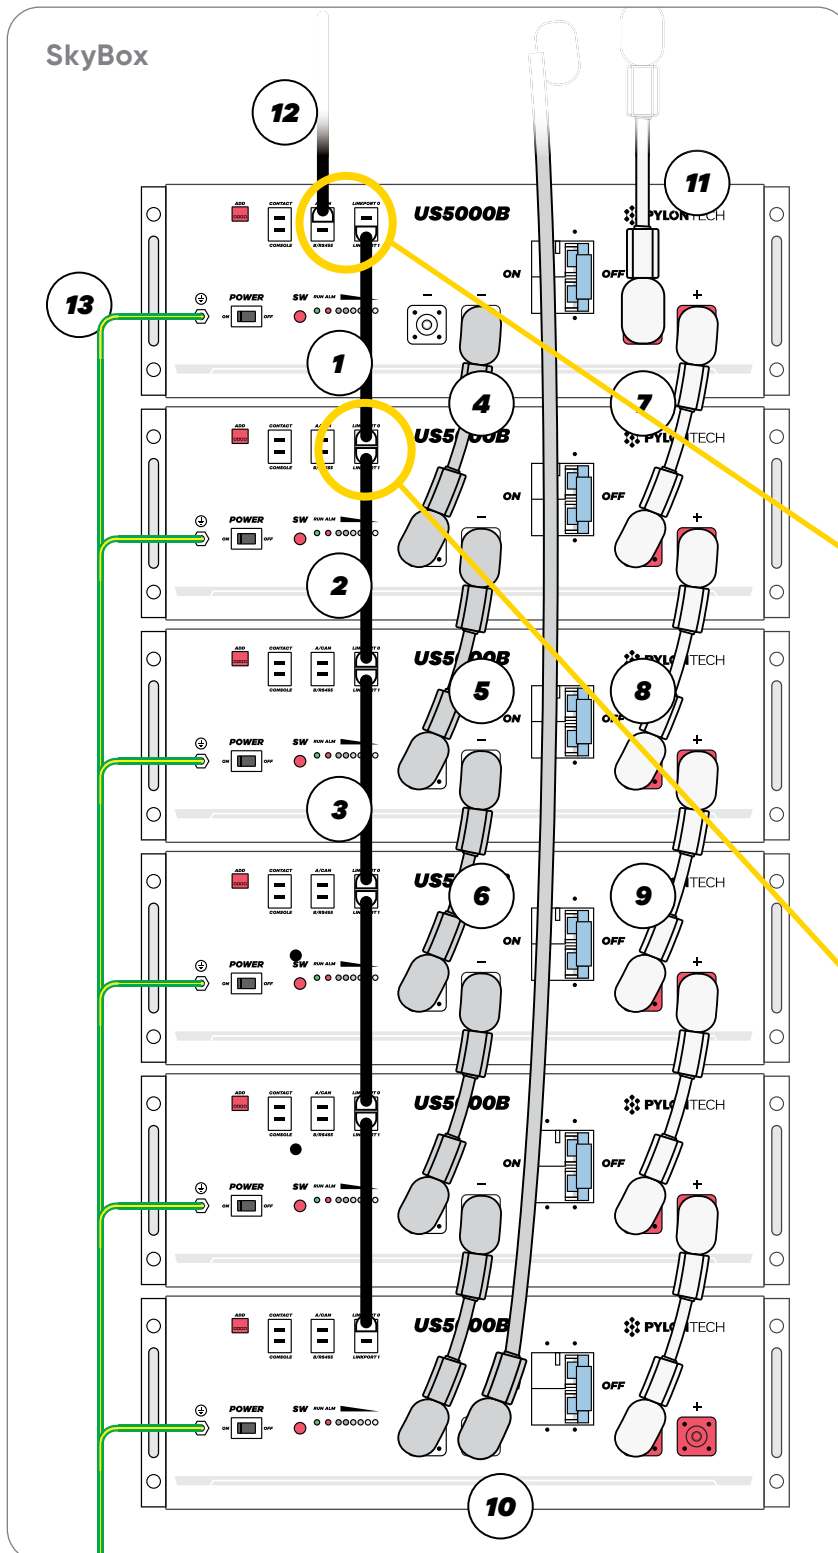

Connect the cables as shown below to suit the number of batteries you require.

SkyBox – 2 pairs of red and black cables return to inverter; each pair should be used for 4 batteries. Earth should be continuous to all batteries.


Connect the communication cable from battery 4 to battery 5 and continue up until battery 8.

13 – Earth Cables.

12 – From Inverter.

1, 2, 3 – Battery comms connections.

10, 11 – From Battery Breaker.

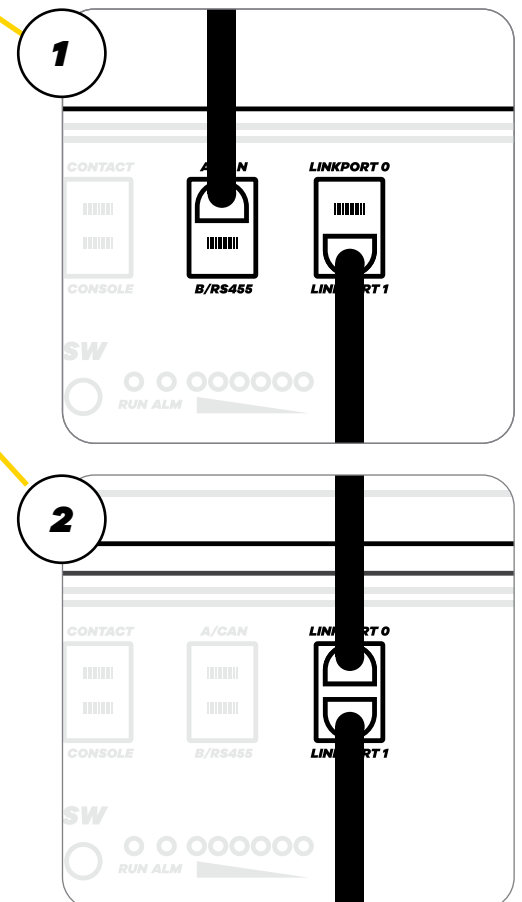

GETTING THE BATTERIES TO WORK TOGETHER





Cable connection troubleshooting

PYLONTECH
GUIDE

Troubleshooting

The most common mistake connecting the cables is starting from "Link Port 0", which is incorrect.

Please make sure the inverter cable is plugged into the "A/CAN" Port. Then connect batteries starting from "Link Port 1" to "Link Port 0" of the next battery unit and continue to alternate.

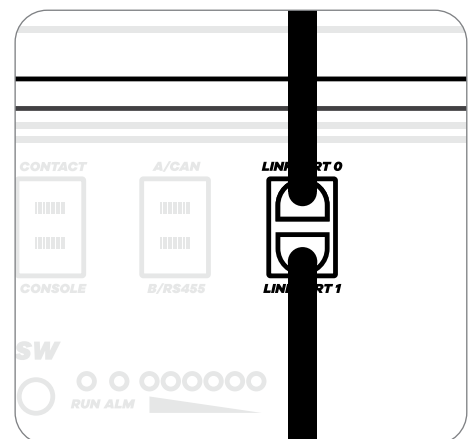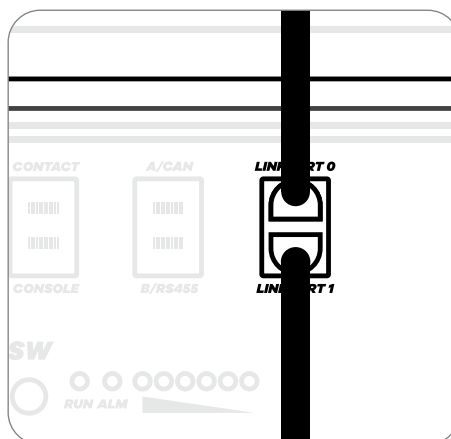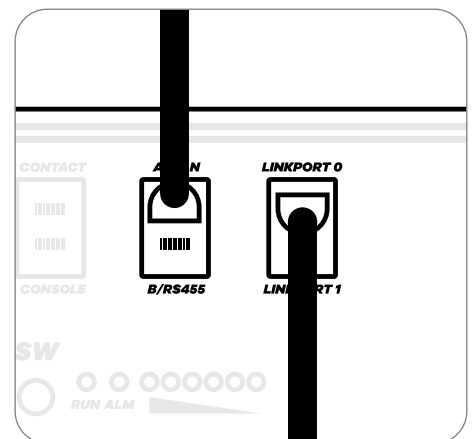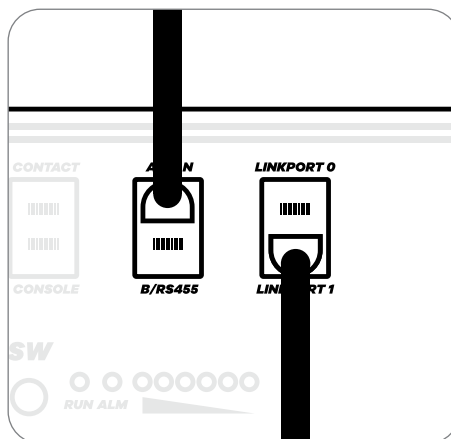

GETTING THE BATTERIES TO WORK TOGETHER

BSL Battery




Mastery battery comms cable connects to CAN port and then daisy chain links all batterys with the RS485 connection with emphasis on the dip switch settings from master to slave batteries.

GETTING THE BATTERIES TO WORK TOGETHER

DIP Switch settings

Definition of the switch is as follows.

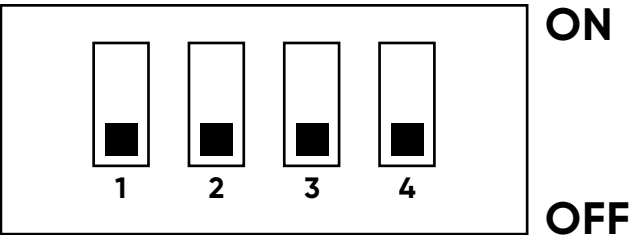

ADDRESS	DIP SWITCH POSITION				NOTE
	#1	#2	#3	#4	
0	ON	OFF	OFF	OFF	Stand-alone use
1	ON	OFF	OFF	OFF	Master Pack
2	OFF	ON	OFF	OFF	Auxiliary Pack1
3	ON	ON	OFF	OFF	Auxiliary Pack2
4	OFF	OFF	ON	OFF	Auxiliary Pack3
5	ON	OFF	ON	OFF	Auxiliary Pack4
6	OFF	ON	ON	OFF	Auxiliary Pack5
7	ON	ON	ON	OFF	Auxiliary Pack6
8	OFF	OFF	OFF	ON	Auxiliary Pack7
9	ON	OFF	OFF	ON	Auxiliary Pack8
10	OFF	ON	OFF	ON	Auxiliary Pack9
11	ON	ON	OFF	ON	Auxiliary Pack10
12	OFF	OFF	ON	ON	Auxiliary Pack11
13	ON	OFF	ON	ON	Auxiliary Pack12
14	OFF	ON	ON	ON	Auxiliary Pack13
15	ON	ON	ON	ON	Auxiliary Pack14

GETTING THE BATTERIES TO WORK TOGETHER

Optimal connection example

SL3ATT[®]
GUIDE

This is the optimal battery connection for balanced voltage across all battery's for equal charging.



LET'S USE THAT SWEET ENERGY FROM THE SUN

Adding solar panels



Not installing panels? You can fast forward to page 31.



Warning

Solar panels start producing electricity as soon as they are exposed to sunlight.



Warning

Check the inverter rating before installing a PV array. If the voltage or current values on the PV array are above the inverter, it will damage the SkyBox system and void the warranty.

1. Electrical Calculations

It is essential to ensure the solar voltages and current do not exceed the maximum inputs allowed on the skybox solar controller.

When calculating maximum voltages and current, we use the method found in the Australian Standards (your country code may differ).

Look for **VOC** and **ISC** on the specification sticker of your chosen panel.

Model	Max PV Open Circuit Voltage	Max PV Short Circuit Current
5kVA Mini SkyBox	450V	20A per tracker
8kVA SkyBox	450V	20A per tracker
10kVA SkyBox	450V	20A per tracker

Panel PV Calculations

VOC = Qty of panels (series) X VOC X 1.12

ISC = No. of parallel strings X ISC X 1.25

See section 5 for examples of how to calculate strings.

The way to determine the maximum allowed inputs is to check the solar input specs printed on the inside of the door.

2. Strings

A string is a set of panels connected with a positive and negative on either end to create a circuit. Before wiring up panels, a basic understanding of series and parallel series is recommended.

Most charge controllers allow for a higher current input which will require running parallel strings. When running a parallel string, there are a few essential points.

1. A parallel string must be the same amount of panels in each series string eg. 2 strings of 4 panels will work, but a string of 3 and 4 in parallel will NOT work
2. Each string in a parallel set can be a different orientation or angle. Eg. 5 panels on the east and 5 on the west in parallel will work.

LET'S USE THAT SWEET ENERGY FROM THE SUN

Adding solar panels

3. Connecting the solar panels

Once the solar panels have been installed and wired up, you will end up with a positive and a negative cable return to the SkyBox. Simply connect these to the supplied DC isolator. Each DC isolator can take 1200V and 32A.




LET'S USE THAT SWEET ENERGY FROM THE SUN

Adding solar panels

4. Earth

It is essential to earth the solar panel array back to the main earthing point in the SkyBox. The earth can be connected using the supplied earth lugs and continuously lopped between all lugs and brought back to the SkyBox. Feed the earth cable into the SkyBox and connect it to the main earth bar inside the switchboard.

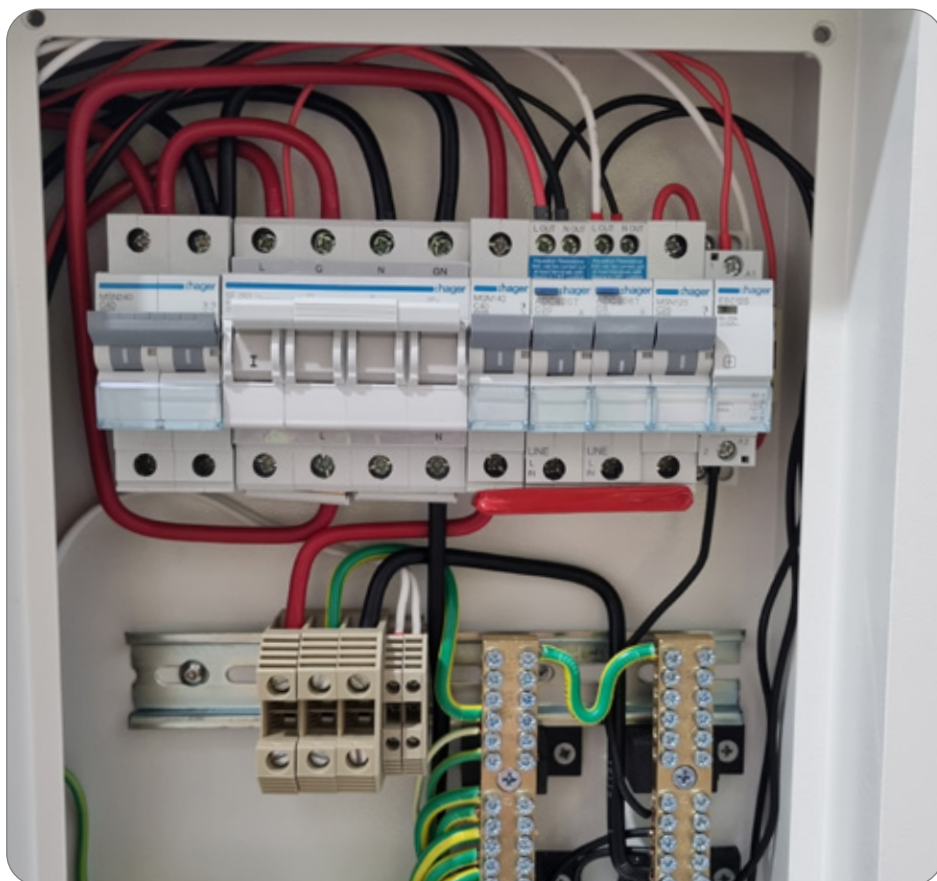

LET'S USE THAT SWEET ENERGY FROM THE SUN

Adding solar panels



Warning

Solar panels start producing electricity as soon as they are exposed to sunlight.

5. Examples

Let's have a look at some potential string configurations and how they might be wired.

SkyBox

20 x 415w (8.3kw) Solar Panels (VOC: 41.8V / ISC:12.48)

Input Limit: 450V and 20A

$VOC = \text{Qty of panels (series)} \times VOC \times 1.12 = 10 \times 37.42 \times 1.12 = 419V$ (max 10 panels per string)

$\text{No. of parallel strings} \times ISC \times 1.25 = 1 \times 13.9 \times 1.25 = 17.4$

We can see here that 1 string is under both the VOC and ISC input limits, so we are safe to install 1 string of 10. If we were to parallel 2 strings, the current would become 34.8A which is over the 20A input current limit and thus we cannot parallel strings.

FORMALLY PART OF THE SYSTEM

Hardwiring the SkyBox (Connecting to an A.C. load) (optional)



Not hardwiring?
You can plug straight
into the powerpoint.



Important

Please make sure that the SkyBox is turned OFF before opening the switchboard. Follow the Shutdown procedure if the SkyBox is turned on.

! Important - Please make sure that the SkyBox is turned OFF before opening the switchboard. Follow the shutdown procedure below if the SkyBox is turned ON.

1. Run the A.C. supply cable from the SkyBox to the switchboard.
2. Connect the active cable to "Active Terminal Block."
3. Connect the Neutral cable to the Neutral Terminal Block.
4. Connect the earth cable to the Earth Terminal Block.
5. Close the switchboard.

Earthing.

1. **!** Ensure earthing requirements meet the appropriate electrical standard for your region and country.

BACKUP WITH A GENERATOR

Adding a generator




Limitations

Electrician required.


Hardwire the generator into the 'Generator' circuit breaker.

Connect both the active and neutral cables to the Main Switch Generator 2 pole circuit breaker. Earth goes into the main earth bar.

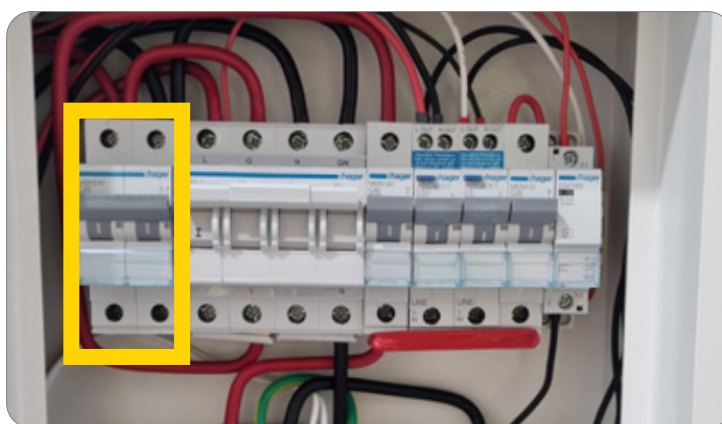

Auto start

You may configure the generator with a two-wire auto start. The auto-start terminals are located within the switchboard. The dry contact terminals do not have polarity.

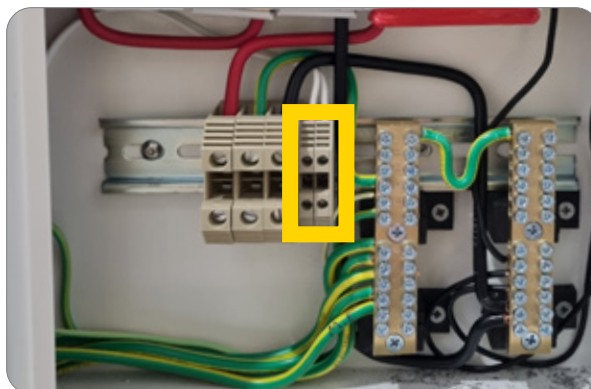

Changeover Switch

The SkyBox contains a changeover switch which has multiple positions:

Position I (Up) – Power is utilised from the SkyBox including the generator

Position II (Down) – Power is diverted directly from the generator. NOTE: This should only be used as a backup for emergencies when there is a fault causing the SkyBox to stop producing power.

Middle Position – OFF position

READY TO ROLL

Commissioning

Thorough commissioning and testing are done on all SkyBox models before they leave our headquarters. Your SkyBox will not leave our warehouse until it has been certified by our SkyBox technicians.

As with all systems, they are unique from the build to how their owners use them; this means slight changes to the parameter configuration are occasionally required. We strongly recommend a qualified technician to do this. If unsure, please contact our SkyBox technicians on **1300 787 488**.

AC Coupled Solar

Fronius

1. Make sure that the Fronius PV inverter is updated to the latest firmware.
2. After making the inverter operational according to the manual, select the language and after this the country specific setup.
3. Here choose MG50.
4. Ready to start up.

Fronius GEN24

1. In Fronius GEN24 devices with software version 1.14 or higher, the Solar API interface is not activated by default and must be activated for integration of the GX device. The setting for this can be found on the user interface of the Fronius inverter under "Communication" – "Solar API".
2. Install as per Fronius guidelines. Connect locally:
3. Set to MicroGrid 50Hz
4. Enable Solar API under the "Communication" tab
5. Enable Sunspec Model type to int + SF under the "Modbus – SunSpec Model Type" tab.

SMA Sunny Boy

1. Change country code to MicroGrid 50Hz
2. Select the Sunny Boy in the left panel and click on Settings
3. Open the "External Communication" tab
4. Enable the TCP and UDP server; keep the default port (502)

Once the steps above have been completed for your AC Coupled inverter, the GX device will automatically detect the PV Inverter.

For more information on AC Coupling please see the relevant guides.

TIME TO GET IT GOING

Start-up procedure

1. Turn on the battery bank by following "Start Up" procedure in Battery Connections - **Next Page**
2. Turn on battery D.C. isolator
3. Switch the Victron inverter to Position I using the black 3-way toggle switch located below:



4. Turn on PV DC isolators located on the outside of the SkyBox
5. Turn on the main generator switch (If no genset is connected you can leave this turned off)
6. Turn on the change over switch to position I (UP)
7. Turn on the main switch off-grid supply

TIME TO GET IT GOING

Start-up procedure

Step 1



Troubleshooting

If by any chance only 1 or 2 lights turn on but not the rest, please check all comms cabling and restart.


Any change you make, turn on/shut down and check cabling.

For any other issues, please call us on 1300 787 488


Power on

Double-check all the power cables and communication cables.

1. Switch ON all modules' breakers first.
2. Switch on all the battery modules. The one with empty Link Port 0 is the Master Battery Module; others are slaves (1 master battery configured with a maximum of 15 slave batteries)

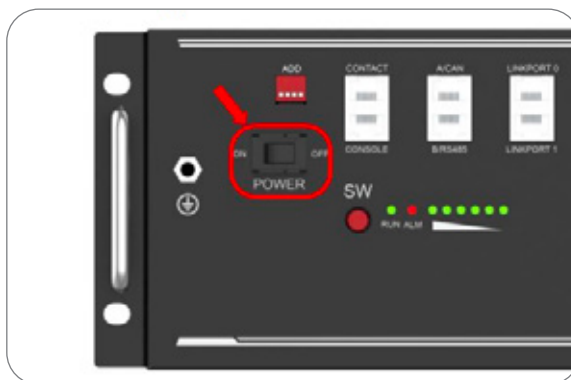

3. Press the red SW button of the master battery to power on; all the battery LED lights will turn on automatically one by one from the Master Battery.

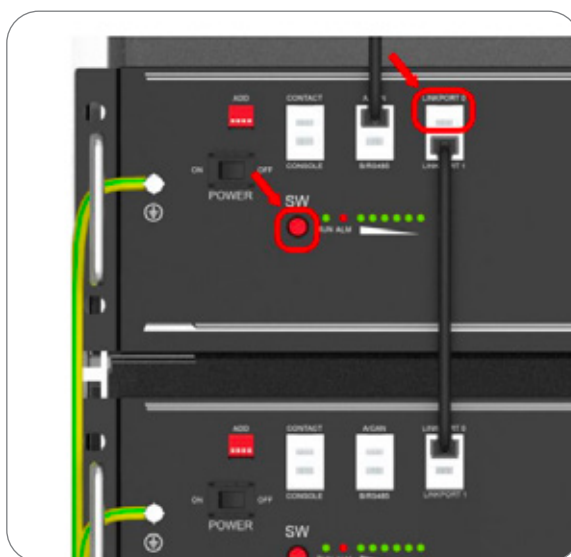

POWERING DOWN

Shut down procedure

Power off



1. AC OFF - (Main switch (Off-Grid Supply)) Breaker



2. PV Isolators OFF



3. Inverter toggle switch (bottom right) to middle position - (OFF)



4. Solar Charge Controller toggle switch to OFF (bottom left of unit)

POWERING DOWN

Shut down procedure continued...

5. Battery system DC Isolator OFF



6. Follow battery shutdown procedure in battery removal

SEE WHAT YOUR SYSTEM IS DOING

Setting up system monitoring and viewing system performance

The 5 ways to view the performance of the SkyBox:

1. Local

Once the SkyBox has turned on (view start up), simply scan the QR code located underneath the Cerbo GX; this will connect your phone to the SkyBox Wifi AP.

Using a web browser, go to 172.24.24.1 and you will be able to see the Victron monitoring portal.

2. WiFi

Using the Victron Connect app.

Scan the QR code underneath the Cerbo GX to connect to the SkyBox Wifi AP and open Victron Connect. Select Cerbo GX that does not display a reception symbol next to it then select remote console.

3. 4G (Optional)

Insert sim card.

4. Ethernet

Look for the Ethernet port and symbol underneath the Victron inverter. The location varies depending on model.



5. GX 50 touchscreen

Look for the Ethernet port and symbol on the top right of the Cerbo GX.



Once connected to the internet, head to <https://vrn.victronenergy.com/>

1. Create/login to your account
2. Add an installation
3. Enter the VRM ID located on the white QR Code sticker
4. Once added, a request will be sent which will be approved within 2 business days (usually much sooner)

ENABLE INTERNET ON THE KSYBOX

Activating and inserting 4G SIM card

Activating and inserting 4G SIM card

1. Open SIM card document and head to aldimobile.com.au/activate
2. Follow the activation process which will require setting up an account
 - a. Ensure both the activation code and the plan voucher code are entered
3. Once you receive the activation email, insert SIM into a phone to complete activation
4. Remove from the phone and insert into the Victron GX LTE 4G device (pictured below)
 - a. To insert, use a pen or pointy object to eject the SIM card tray, insert the SIM and insert the tray with SIM back into the GX LTE device ensuring the tray is pushed all the way in
5. The device will blink quickly once connected to the 4G network to give your SkyBox internet



ALL YOU NEED TO KNOW

FAQ's

What is a SkyBox?

SkyBox is a solution to make getting electrical power 'off-grid' easy. In the past, you'd have to pay up to tens of thousands to run cables to the property; SkyBox solves that and doesn't require an off-grid qualified electrician to install.

Who can install the SkyBox?

Any licensed electrician can install the SkyBox.

What power inputs will the SkyBox recognise?

The SkyBox can draw power from any wind turbine, water generator, solar or other power source. As long as that power source is installed via an A.C. Couple to the home, SkyBox will automatically detect the excess power and charge the batteries. Phase-shifting is required for solar systems that run off the grid with the SkyBox Mini.

What is SkyCare?

SkyCare is a support team based in Victoria that you can call with any technical questions about the SkyBox. This support ensures you have an award-winning team behind you if you get stuck.

Can a shed be connected to the SkyBox?

Yes, though the SkyBox has specific requirements around voltage and receiving 'clean' power from a generator, as long as your generator puts out 50Hz and close to 230V, then it can be plugged into the SkyBox. SkyBox is pre-programmed for this feature to make it easy.

Can it charge an electric car/tractor?

Yes, you can connect the batteries to an EV charger for vehicles. Check EV compatibility and requirements beforehand.

Can the SkyBox be relocated after installation?

Yes, as the SkyBox is easy to install and uninstall, it can be relocated as required by a licensed electrician.

Can the SkyBox be installed outside?

Yes, when the door is closed and the cables are installed according to the instructions, the SkyBox carries an IP55 Rating, meaning it is weather resistant.

Can SkyBox deliver 3 Phase power?

SkyBox offers three-phase capabilities. We program everything before it leaves our warehouse, giving you easily installed, three-phase off-grid or backup power.

What's the depth of discharge of the batteries?

The Lithium batteries in the SkyBox have a 95% depth of discharge. This means you can use 95% of the battery's stored power. This is compared to the 60% usable capacity you usually get when using products like lead-acid batteries off the grid. This gives you a lot more endurance and power capacity.

Can the SkyBox be expanded down the track?

Yes, with the impressive SkyBox capabilities, it can be expanded (almost) to infinity and beyond.

OFF GRID SPECIFICATIONS



SkyBox gives everyone freedom and independence from the power grid.

Acting as a central 'brain,' the SkyBox manages incoming power from your solar, wind, or hydro generators.

Balancing these power sources and storing excess energy in the internal batteries, SkyBox creates a reliable off-grid electricity supply.

10
YEAR
★ ★ ★ ★ ★
WARRANTY

+++
EXPANDABLE



5kVA



8kVA



10kVA

Transfer Switch
Max AC Input (A)

50A
40A

100A
63A

100A
63A

INVERTER

Output (V)	Output Voltage: 230VAC. Frequency 50Hz		
Cont Output at 25°C (VA)	5000VA	8000VA	10000VA
Cont Output at 25°C (W)	4000W	6400W	8000W
Cont Output at 40°C (W)	3700W	5500W	7000W
Cont Output at 65°C (W)	3000W	4000W	6000W
Max Apparent feed-in power	5000VA	8000VA	10000VA
Peak Power (W)	6000W	12000W	12000W
Maximum efficiency	96%	95%	96%

SOLAR

Max Output Current	100A	100A	100A
Max PV Power*	5800W	5800W	5800W
Max Open Circuit Voltage	450V	450V	450V
Max PV Short Circuit Current	20A	20A	20A
Efficiency	96%	96%	96%
MPPTs	2	2	2

BATTERIES

Nominal Voltage	48V		
Nominal Capacity (Wh)	4800 (Wh) multiplied by number of modules	5120 (Wh) multiplied by number of modules	
Usable Capacity (Wh)	4560 (Wh) multiplied by number of modules	4966 (Wh) multiplied by number of modules	
Max No. Modules (Single Unit)**	6	6	6
Max Capacity (Single Unit)	PYLONTECH 28.8kWh	PYLONTECH 28.8kWh	PYLONTECH 28.8kWh
	BSLBATT 30.72Wh	BSLBATT 30.72Wh	BSLBATT 30.72Wh
Working Temperature	0°C–50°C		
Design Life	10+ Years		
Cycle Life	>6000 Cycles		
Authentication Level	IEC62619/CE/UN38.3		
Warranty	10 Years to 60% retention		

MONITORING

WiFi	Yes
Ethernet	Yes
4G LTE	Included

ENCLOSURE

Colour	White
Protection Category	IP54
Dimensions (h x w x d)	1072 x 1354 x 601

- * Additional Solar power can be connected, the SkyBox will only utilise the specified amount
- ** Single Unit refers to one SkyBox, up to 12 additional battery stacks can be added to a SkyBox to increase battery capacity up to over 300kWh
- ² Size is an approximation only and may vary depending on parts available
- ³ Size of cabinets is an approximation only and may vary depending on stock available and size of system Off-Grid Certified meaning the SkyBox has capabilities for renewable energy and generator inputs. SkyBox creates a power supply where no grid input or referencing is required.
- ⁴ Subject to change.

OFF GRID SPECIFICATIONS



FEATURES

Protection Complies with IP54, IK10, NEMA 4
(Independent accredited test laboratory)

Standard IEC62208, IEC/EN/AS60529

Material Body: 1.5mm galvanised steel sheet
Gland Plate: 1.5mm galvanised steel sheet
Door: 1.5mm galvanised steel sheet
Device Mounting Plate: 1.5mm galvanised steel sheet
Seal: Polyurethane


Body The robust monoblock body is fabricated using 1.5mm galvanised steel sheet. Flat face sealing surfaces are provided to increase seal life. Pre-fitted blind nuts are incorporated to accommodate mounts and accessory fasteners to eliminate drilling and retain IP rating. Integral device plate mounts and M6 earth stud is provided.

Double Doors The robust surface mounted door is fabricated using 1.5mm galvanised steel sheet and incorporates concealed removable hinges with captive pins. The door is designed for a 110° opening. Each door contains integral cable management rail studs, M6 earth stud.

Seal A high quality machine-applied full perimeter UL listed Polyurethane seal foamed in place (FIP) provides excellent sealing over a long life. Temperature resistance -40°C to 80°C (160°C short term loading).

Lock 3 point locking system with key-lock swing handle.

DIMENSIONS

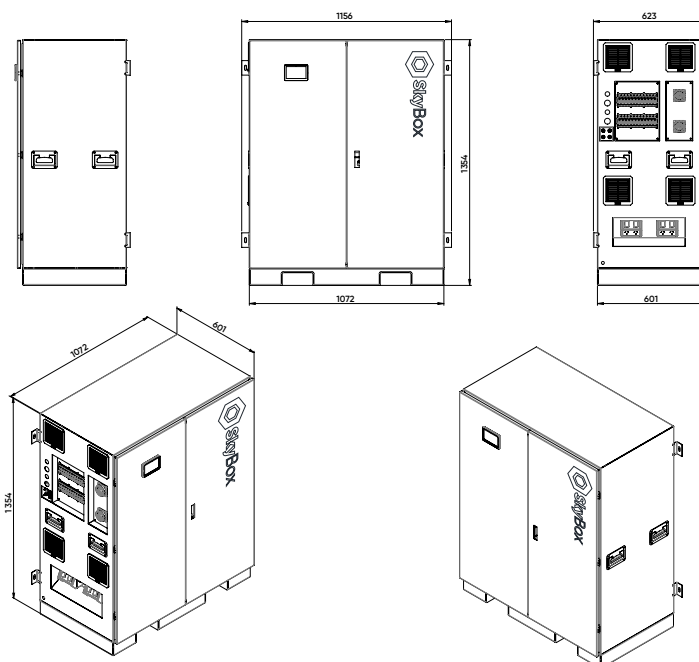

**10
YEAR
WARRANTY**

**+++
EXPANDABLE**

**OFF-GRID
CERTIFIED**
POWERED BY 



DESIGNED AND DEVELOPED BY  SkyEnergy

Sky Energy Group

4/4 Bridge Road, Keysborough,
Victoria, 3173, Australia

Tel: 1300 787 488

Email: team@skyenergysystems.com.au

Website: skyenergy.com.au

RECHARGEABLE LI-ION BATTERY US3000C

Safety Data Sheet

According to GHS (Eighth Revised Edition)

Section 1 Product and Company Identification

Product Identifier

Product Name: Rechargeable Li-ion Battery US3000C

Synonyms: -

Relevant Identified Uses of the Substance or Mixture and Uses Advised Against

Relevant Identified Uses: Please consult the manufacturer.

Uses Advised Against: Please consult the manufacturer.

Details of the Supplier of the Safety Data Sheet

Applicant Name: Pylon Technologies Co., Ltd.

Application Address: No.73, Lane 887, Zu Chongzhi Road, Zhangjiang Hi-Tech Park
Pudong, Shanghai 201203, China

Applicant Post Code: 200120

Applicant Telephone: +86-21-51317697

Applicant Fax: +86-21-51317698

Applicant E-mail: xu.min@pylontech.com.cn

Supplier Name: Pylon Technologies Co., Ltd.

Supplier Address: Plant 8, No. 505 Kunkai Road, Jinxi Town, Kunshan City, Jiangsu
Province, PEOPLE'S REPUBLIC OF CHINA

Supplier Post Code: 215300

Supplier Telephone: +86-21-51317697

Supplier E-mail: xu.min@pylontech.com.cn

Australian Importer Contact Details

Importer Names: FortePowertech P/L

Importer Address: 2/16 Ellemsea Circuit Lonsdale SA, 5160, Australia

Importer Telephone: 1300 086 898

Importer E-mail: info@fortepowertech.com.au

Section 2 Hazards Identification

Hazard class and label elements of the product according to GHS (the eighth revised edition):

GHS Hazard Class

This product meets the definition of an article. Under the Globally Harmonized System of Classification and Labeling of Chemicals (GHS), Articles as defined in the Hazard Communication Standard (29 CFR 1910.1200) of the Occupational Safety and Health Administration of the United States of America, or by similar definition, are outside the scope of the system. [Rev.8 (2019) Part 1.3.2.1.1]

GHS Label Elements

Pictogram: Not applicable.

Signal Word: Not applicable.

Hazard Statements

Not applicable.

Precautionary Statements

Prevention: Do not open or disassemble.
Do not expose to high temperatures or open fire.
Do not mix with batteries of varying sizes, chemistries or types.
Avoid using external impact battery.

Response: Not applicable

Storage: Store under the roof in cool, dry, well-ventilated areas.

Disposal: Dispose of contents/container in accordance with local/regional/national/international regulations.

Section 3 Composition/Information on Ingredients

Component	Concentration (weight percent, %)	CAS No.	EC no.
Lithium Iron Phosphate	Commercial secrets	15365-14-17	-
Graphite	Commercial secrets	7782-42-5	231-955-3
Copper	Commercial secrets	7440-50-8	231-159-6
Aluminium	Commercial secrets	7429-90-5	231-072-3
Poly (vinylidene difluoride)	Commercial secrets	24937-79-9	200-867-7
Carbon black	Commercial secrets	1333-86-4	215-609-9
Polyacrylic acid	Commercial secrets	9003-01-4	202-415-4
Lithium hexafluorophosphate	Commercial secrets	21324-40-3	244-334-7
Nickel	Commercial secrets	7440-02-0	231-111-4

Section 4 First Aid Measures

Description of First Aid Measures

General Advice

Immediate medical attention is required. Show this safety data sheet (SDS) to the doctor in attendance.

Eye Contact

Rinse thoroughly with plenty of water for at least 15 minutes and consult a physician if you feel uncomfortable.

Skin Contact

Take off contaminated clothing and shoes immediately. Wash off with plenty of water for at least 15 minutes and consult a physician if you feel uncomfortable.

Ingestion

Do not induce vomiting. Never give anything by mouth to an unconscious person. Call a physician or Poison Control Center immediately.

Inhalation

Move the victim into the fresh air. If breathing is difficult, give oxygen. Do not use mouth-to-mouth resuscitation if the victim ingested or inhaled the substance. If not breathing, provide artificial respiration and consult a physician immediately.

Protecting First-aiders

Ensure that medical personnel are aware of the substance involved. Take precautions to protect themselves and prevent the spread of contamination.

Most Important Symptoms and Effects, both Acute and Delayed

1. Substance accumulation in the human body may cause concern following repeated or long-term occupational exposure.

Indication of Any Immediate Medical Attention and Special Treatment Needed

1. Treat symptomatically.
2. Delayed symptoms may occur.

Section 5 Fire Fighting Measures

Extinguishing Media

Suitable Extinguishing Media

Dry chemical, carbon dioxide or alcohol-resistant foam.

Unsuitable Extinguishing Media

Do not use a solid water stream as it may scatter or spread the fire.

Specific Hazards Arising from the substance or mixture

1. Containers may explode when heated.
2. Fire-exposed containers may vent contents through pressure relief valves.
3. May expand or decompose explosively when heated or involved in fire.

Advice for Firefighters

1. As in any fire, wear self-contained breathing apparatus (MSHA/NIOSH approved or equivalent) and full protective gear.
2. Fight fire from a safe distance, with adequate cover.
3. Prevent fire extinguishing water from contaminating surface water or the groundwater system.

Section 6 Accidental Release Measure

Personal Precautions, Protective Equipment and Emergency Procedures

1. Ensure adequate ventilation. Remove all sources of ignition.
2. Evacuate personnel to safe areas. Keep people away from and upwind of spill/leak.
3. Use personal protective equipment. Avoid breathing vapours, mist, gas or dust.

Environmental Precautions

1. Prevent further leakage or spillage if safe to do so.
2. Discharge into the environment must be avoided.

Methods and Materials for Containment and Cleaning Up

Absorb spilled material in dry sand or inert absorbent. In case of a large amount of spillage, contain a spill by bunding.

Adhered or collected materials should be promptly disposed of in accordance with appropriate laws and regulations.

Remove all sources of ignition. Use spark-proof tools and explosion-proof equipment.

Section 7 Handling and Storage

Precautions for Handling

1. Handling is performed in a well-ventilated area.
2. Wear suitable protective equipment.
3. Avoid contact with skin and eyes.
4. Keep away from heat/sparks/open flames/hot surfaces.
5. Take precautionary measures against static discharges.

Precautions for Storage

1. Keep containers tightly closed.
2. Keep containers in a dry, cool and well-ventilated place.
3. Keep away from heat/sparks/open flames/hot surfaces.
4. Store away from incompatible materials and foodstuff containers.

Section 8 Exposure Controls/ Personal Protection

Control Parameters

Occupational Exposure Limit Values

Component	Country/Region	Limit Value - Eight Hours		Limit Value - Short term	
		ppm	mg/m ³	ppm	mg/m ³
Graphite 7782-42-5	USA - OSHA	-	15	-	-
	South Korea	-	2	-	-
	Ireland	-	10	-	-
	Germany (DFG)	-	4	-	-
	Denmark	-	2.5	-	5
	Australia	-	3 (4)	-	-
Copper 7440-50-8	The Netherlands	-	0.1	-	-
	Poland	-	0.2	-	-
	Latvia	-	0.5	-	1
	Germany (DFG)	-	0.01	-	0.02
Aluminium 7429-90-5	USA - OSHA	-	15	-	-
	South Korea	-	10	-	-
	Ireland	-	1	-	-
	Germany (DFG)	-	4	-	-
	Denmark	-	5	-	10
	Australia	-	10	-	-
Carbon black 1333-86-4	USA - OSHA	-	3.5	-	-
	South Korea	-	3.5	-	-
	Ireland	-	3.5	-	7
	France	-	3.5	-	-
	Denmark	-	3.5	-	7
	Australia	-	3	-	-
Nickel 7440-02-0	USA - OSHA	-	1	-	-
	South Korea	-	1	-	-
	Ireland	-	0.5	-	-
	Hungary	-	0.1	-	0.1
	Denmark	-	0.05	-	0.1
	Australia	-	1	-	-

Occupational Exposure Limit Values

Component	Source	Biological monitoring index	Biological limits value	Sampling time	remark
Lithium hexafluorophosphate	SCOEL(EU)	Fluorine/urine	8mg/L	end of shift	

Monitoring Methods

1. EN 14042 Workplace atmospheres. Guide for the application and use of procedures for assessing exposure to chemical and biological agents.
2. GBZ/T 160 Determination of toxic substances in workplace air (Series effective standard) and GBZ/T 300 Determination of toxic substances in workplace air (Series standard).

Engineering Controls

1. Ensure adequate ventilation, especially in confined spaces.
2. Ensure that eyewash stations and safety showers are close to the workstation location.
3. Use explosion-proof electrical/ventilating/lighting/equipment.
4. Set up an emergency exit and necessary risk-elimination area.

Personal Protection Equipment

Eye protection

Tightly fitting safety goggles approved by EN 166 (EU) or NIOSH (US).

Hand protection

Wear protective gloves (such as butyl rubber), passing the tests according to EN 374(EU), US F739 or AS/NZS 2161.1 standard.

Respiratory protection

If exposure limits are exceeded or if irritation or other symptoms are experienced, use a full-face respirator with a multi-purpose combination (US) or type AXBEK (EN 14387) respirator cartridges.

Skin and body protection

Wear fire/flame resistant/retardant clothing and antistatic boots.

Section 9 Physical and Chemical Properties

Appearance:	Li-ion battery, individually packaged, 48V 74Ah 3552Wh
Odor threshold:	No information available
Melting Point/Freezing Point (°C):	No information available
Flash Point (°C)(Closed Cup):	Not applicable
Flammability:	No information available
Vapor Pressure (KPa):	Not applicable
Relative Density (Water=1):	No information available
n-Octanol/Water Partition Coefficient:	No information available
Particle characteristics:	No information available
Odor:	No information available
pH:	No information available
Initial Boiling Point & Boiling Range (°C):	No information available
Evaporation Rate:	Not applicable
Upper/Lower explosive limits [% (v/v)]:	Upper limit: No information available; Lower limit: No information available
Relative Vapour Density (Air = 1):	Not applicable
Solubility:	No information available
Auto-Ignition Temperature (°C):	No information available
Kinematic Viscosity (mm²/s):	Not applicable

Section 10 Stability and Reactivity

Reactivity

Contact with incompatible substances can cause decomposition or other chemical reactions.

Chemical Stability

Stable under proper operation and storage conditions.

Possibility of Hazardous Reactions

Mixtures with metallic acetylene, when heated, cause a fire or incandescence. Reacts severely with halogens, interhalogens or other strong oxidants, or causes a fire. Ultrafine powder will self-ignite in the air at room temperature.

Conditions to Avoid

Incompatible materials, heat, flame and spark.

Incompatible Materials

Metal acetylide, halogen, interhalogen, halogen oxides, nitric acid, nitrous oxide, nitrates, nitrites, halogen oxyacid salts, chromates, permanganates, inorganic peroxides, metal oxides and peroxyformic acid. Halogen, interhalogen, strong oxidant, water and acids. Oxidants, halogen, interhalogen and mercury.

Hazardous Decomposition products

Under normal conditions of storage and use, hazardous decomposition products should not be produced.

Section 11 Toxicological Information

Acute Toxicity

Component	CAS No.	LD50 (Oral)	LD50 (Dermal)	LC50 (Inhalation, 4h)
Carbon Black	1333-86-4	>15400mg/kg (Rat)	>3000mg/kg (Rabbit)	No information available
Polyacrylic acid	9003-01-4	2500mg/kg (Rat)	No information available	No information available

Skin Corrosion/Irritation

No information available

Serious Eye Damage/Irritation

No information available

Skin Sensitization

No information available

Respiratory Sensitization

No information available

Germ Cell Mutagenicity

No information available

Carcinogenicity

ID	CAS No.	Component	IARC	NTP
1	15365-14-17	Lithium Iron Phosphate	Not Listed	Not Listed
2	7782-42-5	Graphite	Not Listed	Not Listed
3	7440-50-8	Copper	Not Listed	Not Listed
4	7429-90-5	Aluminium	Not Listed	Not Listed
5	24937-79-9	Poly(vinylidenedifluoride)	Not Listed	Not Listed
6	1333-86-4	Carbon black	Category 2B	Not Listed
7	9003-01-4	Polyacrylic acid	Category 3	Not Listed
8	21324-40-3	Lithium hexafluorophosphate	Not Listed	Not Listed
9	7440-02-0	Nickel	Category 2B	Not Listed

Reproductive Toxicity

No information available

Reproductive Toxicity (Additional)

No information available

STOT-Single Exposure

No information available

Aspiration Hazard

No information available

Section 12 Ecological Information

Acute Aquatic Toxicity

Component	CAS No.	Fish	Crustaceans	Algae
Nickel	7440-02-0	LC50:40mg/L (96h)(Fish)	EC50: 1mg/L (48h)	No information available
Aluminium	7429-90-5	LC50: 1.55mg/L (96h)(Fish)	No information available	No information available
Copper	7440-50-8	LC50: 0.665mg/L (96h)(Fish)	EC50: 0.02mg/L (48h)	ErC50: 79mg/L (96h)

Chronic Aquatic Toxicity

No information available.

Others

Persistence and Degradability

No information available

Bioaccumulative Potential

No information available.

Mobility in Soil

No information available

Lithium Iron Phosphate does not meet the criteria for PBT and vPvB according to Regulation (EC) No 1907/2006, annex XIII.

Graphite does not meet the criteria for PBT and vPvB according to Regulation (EC) No 1907/2006, annex XIII.

Copper does not meet the criteria for PBT and vPvB according to Regulation (EC) No 1907/2006, annex XIII.

Aluminium does not meet the criteria for PBT and vPvB according to Regulation (EC) No 1907/2006, annex XIII.

Results of PBT and vPvB Assessment

Poly(vinylidene difluoride does not meet the criteria for PBT and vPvB according to Regulation (EC) No 1907/2006, annex XIII.

Carbon black does not meet the criteria for PBT and vPvB according to Regulation (EC) No 1907/2006, annex XIII.

Polyacrylic acid does not meet the criteria for PBT and vPvB according to Regulation (EC) No 1907/2006, annex XIII.

Lithium hexafluorophosphate does not meet the criteria for PBT and vPvB according to Regulation (EC) No 1907/2006, annex XIII.

Nickel does not meet the criteria for PBT and vPvB according to Regulation (EC) No 1907/2006, annex XIII.

Section 13 Disposal Considerations

Waste Chemicals

Before disposal should refer to the relevant national and local laws and regulations. Recommend the use of incineration disposal.

Contaminated Packaging Disposal Recommendations

Containers may still present a chemical hazard when empty. Keep away from hot and ignition source of fire. Return to supplier for recycling if possible. Refer to sections 13.1 and 13.2.

Section 14 Transport Information

Transporting Label



Marine pollutant	None
UN Number	3480
UN Proper Shipping Name	Lithium ion batteries (including lithium-ion polymer batteries)
Transport Hazard Class	9
Transport Subsidiary Hazard Class	None
Packaging Group	Packagings shall conform to packing group II performance level.

Section 15 Regulatory Information

International Chemical Inventory

Component	EINECS	TSCA	DSL	IECSC	NZIoC	PICCS	KECI	AICS	ENCS
Lithium Iron Phosphate	✗	✗	✗	✗	✗	✗	✗	✗	✗
Graphite	✓	✓	✓	✓	✓	✓	✓	✓	✗
Copper	✓	✓	✓	✓	✓	✓	✓	✓	✗
Aluminium	✓	✓	✓	✓	✓	✓	✓	✓	✗
Poly(vinylidene difluoride)	✗	✓	✓	✓	✓	✓	✓	✓	✓
Carbon black	✓	✓	✓	✓	✓	✓	✓	✓	✗
Polyacrylic acid	✗	✓	✓	✓	✓	✓	✗	✓	✓
Lithium hexafluorophosphate	✓	✓	✗	✓	✗	✓	✓	✓	✗
Nickel	✓	✓	✓	✓	✓	✓	✓	✓	✗

[EINECS] European Inventory of Existing Commercial Chemical Substances.

[TSCA] United States Toxic Substances Control Act Inventory.

[DSL] Canadian Domestic Substances List.

[IECSC] China Inventory of Existing Chemical Substances.

[NZIoC] New Zealand Inventory of Chemicals.

[PICCS] Philippines Inventory of Chemicals and Chemical Substances.

[KECI] Existing and Evaluated Chemical Substances.

[AICS] Australia Inventory of Chemical Substances.

[ENCS] Existing And New Chemical Substances.

Notes

- ✓ Indicates that the substance included in the regulations
- ✗ That no data or included in the regulations

Section 16 Additional Information

Creation Date	10/10/2020
----------------------	------------

Revision Date	10/10/2020
----------------------	------------

Reason for Revision	-
----------------------------	---

Disclaimer

This Safety Data Sheet (SDS) has been prepared according to UN GHS (the 8th revised edition). The data included was derived from an international authoritative database and provided by the enterprise.

Other information was based on the present state of our knowledge. We try to ensure the correctness of all information. Due to the diversity of information sources and the limitations of our knowledge, this document is only for user reference.

Users should make their independent judgement of the suitability of this information for their particular purposes. We do not assume responsibility for loss, damage or expense arising out of or in any way connected with the handling, storage, use or disposal of the product.

RACK BATTERY PACK USER MANUAL

@2023



Rack Battery Pack

User Manual



Product Name: 48V55/100/104/134/156/172/200/280/300Ah Battery

Model No: B-LFP48-55/100/104/134/156/172/200/280/300E

Version No: V2.2

Content

1. Safety Precautions	1
1.1 Note Before Installation	1
1.2 During Operation	2
2. System Application Introduction	2
2.1 PV Self-use Surplus Power to Grid	2
2.2 Peak Shaving and Valley Filling	2
2.3 Standby Power Supply	3
3. Product Specification	4
3.1 Packing List	4
4. Battery Drawing	5
4.1. Interface Description	6
4.2 LED Display Definition	7
4.3 Battery Connection and Communication Instructions	9
4.4 Interface Diagram	10
4.5 Display rendering	11
5. Battery Installation Instructions	14
5.1 Installation location	14
5.2 Installation Tools	14
5.3 Installation steps	15
5.4 Installing battery strings in parallel	19
6. Appendix1	22
7. Appendix2	23
8. Appendix3	26

4.1.Interface Description

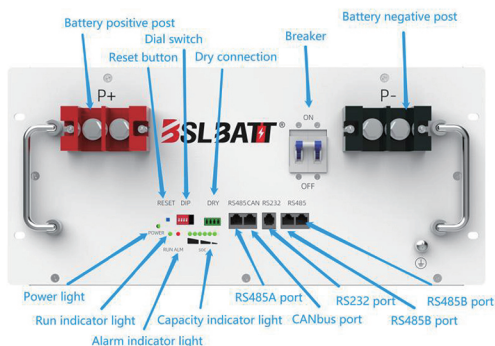



Figure 2

Table1.Battery Pack Frontpanel Port Definition

No.	Illustration	Silk-screen	Remark
1	Battery positive post	P+	positive output
2	Battery negative post	P-	negative output
3	Reset button	RESET	Reset battery
4	Dial switch	DIP	Address setting, range 2~15
5	Dry connection	DRY	pin3 to pin4 often open, closed with low power alarm Pin1 to pin2 often open, closed when failure or protection
6	RS485A Port	RS485	RS485 communication with monitoring equipment
7	CANbus port	CAN	CANbus and inverter connection ports
8	RS232 port	RS232	RS232 communication port
9	RS485B port	RS485	RS485 paralleling communication port
10	Power light	POWER	After startup, the LED is steady green

11	Running indicator light	RUN	After startup, the LED blinks green
12	Alarm indicator light	ALM	The fault is displayed in red
13	Capacity indicator light	SOC	Refer to Table 2
14	Breaker	ON/OFF	Battery string output is enabled

4.2 LED Display Definition

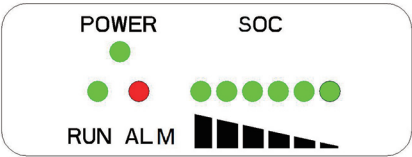

No.	Definition	Specification	Criteria
1	POWER Light	System no abnormal, always bright	
	RUN Light	See Table 2, Table 4	
	ALM Light	See Table 2, Table 4	
	SOC Light	See Table 3, Table 4	

Table 2 LED Working Status Indicators

Status	Normal/alarm /protection	RUN	ALM	Electricity indicator LED						Remark
		●	●	●	●	●	●	●	●	
Power off	Dormancy	off	off	off	off	off	off	off	off	All off
Stand by	Normal	Flash 1	off	According to the electricity indicator						Standby status
	Alarm	Flash 1	Flash 3							Module low voltage
Charge	Normal	Bright	off	According to the electricity indicator (power indicator maximum LED flash 2)						Maximum power LED flash (flash 2), overcharge alarm ALM no flash
	Alarm	Bright	Flash 3							
	Overcharge protection	Bright	off	Bright	Bright	Bright	Bright	Bright	Bright	If there is no electricity, the indicator is in standby status
	Temperature, overcurrent, failure protection	off	Bright	off	off	off	off	off	off	Stop charging

Discharge	Normal	Flash 3	off	According to the electricity indicator						
	Alarm	Flash 3	Flash 3							
	Undervoltage protection	off	off	off	off	off	off	off	off	Stop discharging
	Temperature, overcurrent, short circuit, reverse connection, failure protection	off	off	off	off	off	off	off	off	top discharging
Invalid	Normal	off	off	off	off	off	off	off	off	Stop charge/discharging

Table 3 Description of capacity indicators

Status		Charge						Discharge					
Capacity indicator		L6	L5	L4	L3	L2	L1	L6	L5	L4	L3	L2	L1
		●	●	●	●	●	●	●	●	●	●	●	●
SOC (%)	0~16.6%	off	off	off	off	off	Flash 2	off	off	off	off	off	Bright
	16.6~33.2%	off	off	off	off	Flash 2	Bright	off	off	off	off	Bright	Bright
	33.2~49.8%	off	off	off	Flash 2	Bright	Bright	off	off	off	Bright	Bright	Bright
	49.8~66.4%	off	off	Flash 2	Bright	Bright	Bright	off	off	Bright	Bright	Bright	Bright
	66.4~83%	off	Flash 2	Bright	Bright	Bright	Bright	off	Bright	Bright	Bright	Bright	Bright
	83~100%	Flash 2	Bright	Bright	Bright	Bright	Bright	Bright	Bright	Bright	Bright	Bright	Bright
Operating indicator		Bright								Flash (flash 3)			

Table 4 LED Flash Notes

Flash mode	Bright	off
Flash 1	0.25S	3.75S
Flash 2	0.5S	0.5S
Flash 3	0.5S	1.5S

Remark :

LED indicator light alarm can be enabled or prohibited through the upper computer , factory default is enable.

4.3 Battery Connection and Communication Instructions

Positive and negative output interface: Connect the battery positive (+) and negative (-) through the DC isolator to the inverter positive and negative connection inlet.



Table 5 Set the address of pack

[illegible]

Dry Connection Port

The definition of dry connection port: Pin1 to pin 2 always open, close when broken and protection, Pin3 to Pin4 always open, close when low SOC alarm.



5.Battery Installation Instructions

5.3 Installation steps

Step 1:

When receiving the product, first check whether all parts are complete, if not, please report to the Dealer .

Step 2:

Choose a suitable installation location and require the battery pack to be placed at a safe. The first load-bearing plate should be at least 15cm away from the ground. The distance between the load-bearing plates is about 205mm. We recommend that the installation distance be 205mm.

Step 3:

Mark the position of the nut on the cabinet with the mounting bracket, and clamp the nut into the cabinet. See Figure3.

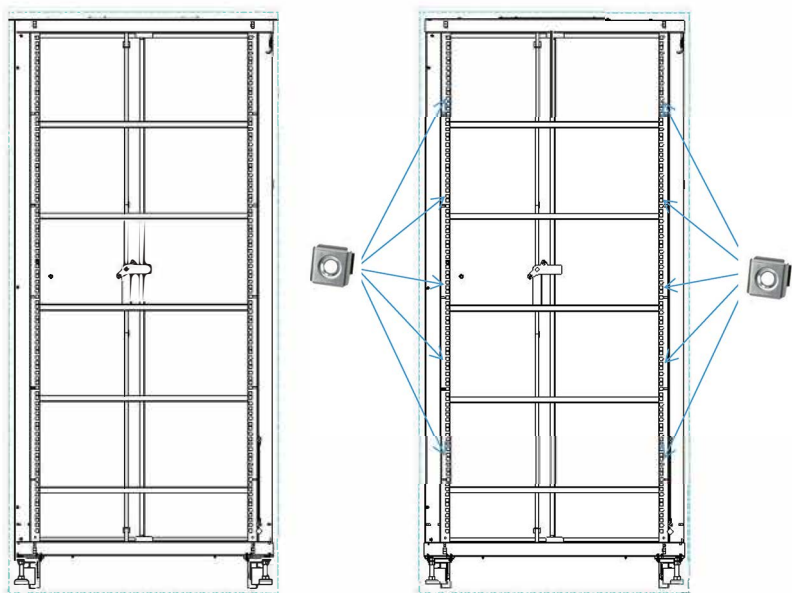


Figure 3

Step 4:

As shown in the below, install the battery pack. The pack is too heavy , Please use a special lifting device to lift the pack for operation and safety protection.Put the battery module into the cabinet and screw it, as shown in Figure 4.

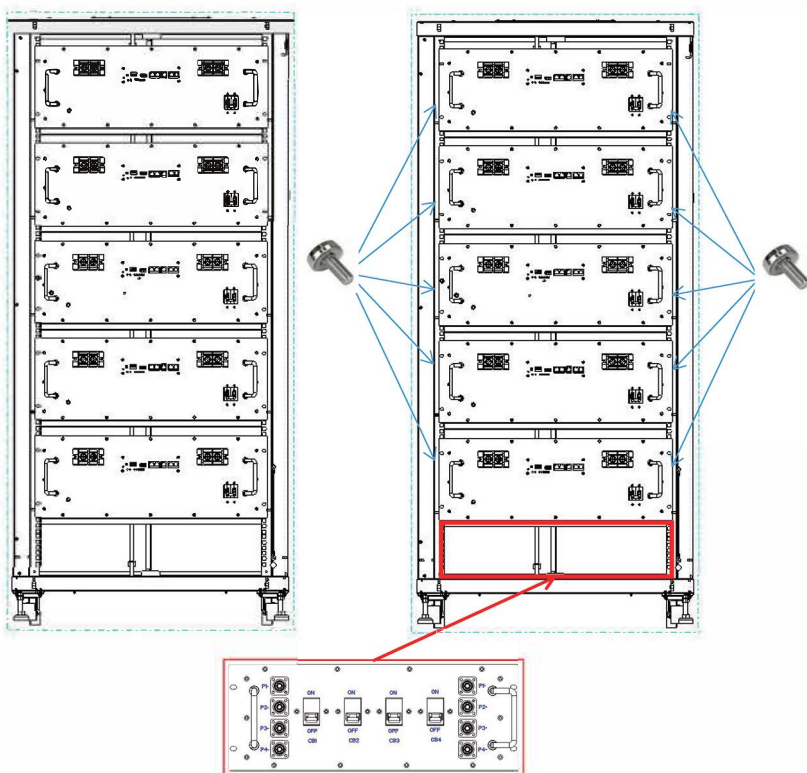


Figure 4

Step 5:

Connect the wiring of the Pack as shown below.see figure 11.If inverter need CAN BUS port /RS485 port,please insert communication cable (RJ45) to CAN port.

Step 6:

Connect the parallel communication cable (yellow network line).

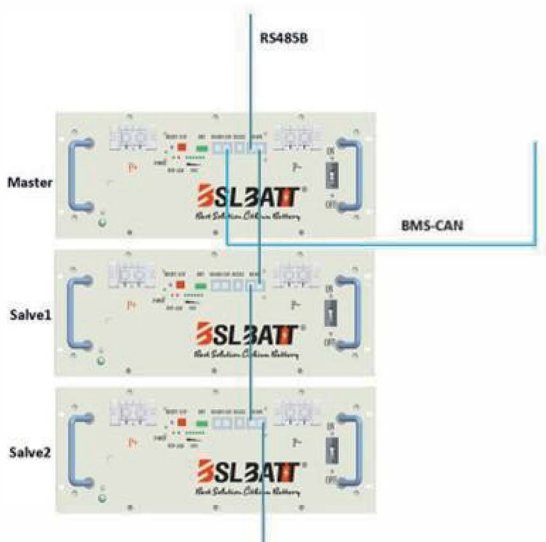


Figure 5

Step 7:

Start and stop battery pack. Confirm that the operation is correct, and the battery function can be turned on after the wiring is correct ,and You can press down power switch(ON/OFF) 3 second for start battery pack,then turn on switch in the Breaker , the battery start working and output ,it enter standby mode(if there is no power switch,please use a little pole and press down the RESET key 3-6second,like as follow picture,LED indicate all running status and check it's self). See Figure 6



[illegible]

This image shows a full page of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page, typical of notebook paper. There are no margins, text, or other markings on the page.

This image shows a full page of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page, typical of notebook paper. There are no margins, text, or other markings on the page.

This image shows a full page of blank, lined paper. It features approximately 20 horizontal blue or grey lines spaced evenly apart, typical of notebook paper. The lines extend across the entire width of the page, leaving small margins at the top and bottom. There are no vertical lines, text, or other markings on the page.

Notes

[illegible]



[SKYENERGY.COM.AU/SKYBOX](https://skyenergy.com.au/skybox)

DESIGNED AND DEVELOPED BY  SkyEnergy